

This file is available for free download at <http://www.iluvmyrx7.com>

This file was not scanned to deprive Mazda of any money – it was scanned due to the rareness of the original manuals and the overwhelming need of the RX-7 owner to have this information so that they can accurately troubleshoot problems. Perhaps if Mazda's dealerships could support the Rotary Engine it wouldn't be so necessary for the owners to do so.



Many thanks to Scott89t2 and www.1300cc.com for scanning this file.

1989 Mazda RX-7 Factory Service Manual

This Online/PC version of the Manual has been brought to you by “Scott 89t2” and www.1300cc.com

Thanks to those who are hosting it for me.



Some parts of the manual may be hard to read or see on the screen, but if you print the pages out it's perfect. Well except for the crookedness ☺.

***Terms of Use:** This online/PC copy of the manual is only to be used and in your possession if you already own the printed version. It is for backup purposes only in case yours (or part of) is lost or damaged. If you downloaded this manual by mistake, Please Remove it from your possession. I also take no responsibility for what you do to yourself or your car while you use this manual.

PARTS INDEX

A

A/C MAIN RELAY	U- 67
ACCELERATOR CABLE	F2- 37
ACTUATOR (AAS)	R- 34
ACTUATOR	T- 77
AIR CONTROL VALVE	F1-67, 68
AIR CONTROL VALVE	F2-63, 64
AIR PUMP	F1-65, 66
AIR PUMP	F2- 61
AIR SUPPLY VALVE	F2- 39
AIRFLOW METER	F1- 82
AIRFLOW METER	F2- 80
ALTERNATOR	G-6, 12, 17
ANTI-LOCK BRAKES (ABS)	P- 52
APEX SEAL	C- 44
AUDIO COMPONENT ASSEMBLY	T-92, 108
AUTOMATIC TRANSMISSION	K-47, 50, 134, 149

B

BACK-UP LIGHT AND 5TH SWITCH	F1- 86
BACK-UP LIGHT AND 5TH SWITCH	F2- 84
BACK-UP LIGHT	T-54, 58
BATTERY	G- 5
BLOWER MOTOR	U- 31
BLOWER UNIT	U- 30
BRAKE PEDAL	P-10, 11
BYPASS AIR CONTROL VALVE	F1- 41
BYPASS AIR CONTROL VALVE	F2- 39

C

CARGO ROOM LAMP	T- 65
CHARCOAL CANISTER	F1- 70
CHARCOAL CANISTER	F2- 66
CHECK-AND-CUT VALVE	F1-69, 70
CHECK-AND-CUT VALVE	F2-65, 66
CHECK VALVE	F2- 37
CIRCUIT OPENING RELAY	F1- 57
CIRCUIT OPENING RELAY	F2- 53
CLUSTER SWITCH. T-17, 18, 19, 23, 24, 25, 26	
CLUTCH COVER	H-14, 16
CLUTCH DISC	H-14, 17
CLUTCH MASTER CYLINDER	H-7, 8, 9
CLUTCH PEDAL	H-5, 6
CLUTCH RELEASE CYLINDER	H-8, 11, 12
CLUTCH SWITCH	F1- 86
CLUTCH SWITCH	F2- 84
CLUTCH SWITCH	T- 77
COIL WITH IGNITER	G-28, 30
COMPRESSOR	U-46, 47, 56, 63
CONDENSER	U-64, 65
CONTROL LINK	R- 28
CONVERTIBLE TOP	S-74, 77, 80, 89, 102

COOLING FAN	E-6, 7
COOLING UNIT	U-43, 44
CORNER SEAL	C- 45
CPU	T- 32
CRANK ANGLE SENSOR	G- 32
CRUISE CONTROL SWITCH	T-17, 18
CRUISE CONTROL UNIT	T-75, 76

D

DASHPOT	F1- 72
DASHPOT	F2- 68
DAYTIME RUNNING LIGHTS	T-52, 61
DIFFERENTIAL	M-18, 19, 20, 21, 24
DIMMER RELAY	T- 51
DOOR	S-43, 46
DOOR KEY CYLINDER SWITCH	T- 83
DOOR LOCK CYLINDER LIGHT	T- 54
DOOR LOCK SWITCH	T- 83
DOOR SWITCH	T- 83
DOOR WOOFER AMPLIFIER	T-111, 112
DOOR WOOFER SPEAKER	T-110
DRIVE BELT	C- 5
DRIVESHAFT	M-14, 15
DUTY SOLENOID VALVE	F2- 41

E

EC-AT CONTROL UNIT	K- 42
ECCENTRIC SHAFT	C-46, 52
ECCENTRIC SHAFT BYPASS VALVE	D- 15
ECCENTRIC SHAFT PULLEY	C-69, 76
ECPS CONTROL UNIT	N- 27
ELECTRIC COOLING FAN	E- 13
ENGINE CONTROL UNIT	F1- 78
ENGINE CONTROL UNIT	F2- 76
ENGINE	C-11, 21, 39, 47, 80
EVAPORATOR	U- 45
EX-HI RELAY	U- 32
EXHAUST DEVICES	F1- 59
EXHAUST DEVICES	F2- 55
EXPANSION VALVE	U- 44

F

FAN RELAY	E- 13
FLYWHEEL	H-14, 17
FRONT AXLE	M-6, 8
FRONT BUMPER	S- 24
FRONT DISC BRAKES	P-35, 38
FRONT FOG LIGHT	T- 61
FRONT FOG LIGHT RELAY	T- 52
FRONT FOG LIGHT SWITCH	T- 27
FRONT HOUSING	C-39, 50
FRONT LOWER ARM	R- 14

PARTS INDEX

FRONT ROTOR..... C-42, 52
 FRONT ROTOR HOUSING..... C-42, 53
 FRONT SHOCK ABSORBER..... R-11, 12
 FRONT SPEAKER..... T-110
 FRONT STABILIZER..... R- 17
 FRONT STATIONARY..... C- 40
 FUEL LID OPENER..... S- 28
 FUEL PUMP RESISTOR RELAY..... F1- 57
 FUEL PUMP RESISTOR RELAY..... F2- 53
 FUEL PUMP..... F1-52, 53
 FUEL PUMP..... F2-48, 49
 FUEL TANK..... F1- 51
 FUEL TANK..... F2- 47
 FUSE BOX..... T- 15

H

HEADLIGHT..... T-55, 56, 57
 HEADLIGHT RELAY..... T- 51
 HEADLINER AND GARNISH..... S- 21
 HEADREST SPEAKER..... T-109, 110
 HEADREST SPEAKER AMPLIFIER..... T-112
 HEADREST SPEAKER SWITCH..... T-112
 HEADREST SPEAKER SWITCH..... T-112, 113
 HEAT HAZARD SENSOR..... F1- 85
 HEAT HAZARD SENSOR..... F2- 83
 HEATER CORE..... U- 35
 HEATER RELAY..... U- 32
 HEATER UNIT..... U- 34
 HIGH-MOUNT STOPLIGHT..... T- 58
 HIGH-TENSION LEADS..... G- 27
 HOLD SWITCH..... K- 39
 HOOD AND HOOD LOCK..... S-22, 23
 HOOD SWITCH..... T- 83
 HORN..... S- 65
 HYDRAULIC UNIT..... P-63, 65

I

IGN RELAY..... U- 32
 IGNITION KEY CYLINDER LAMP..... T- 63
 IGNITION SWITCH AND
 KEY REMINDER SWITCH..... T- 17
 IGNITION SWITCH..... T- 17
 INDICATOR PANEL..... K-164
 INHIBITOR SWITCH..... K-39, 40
 INJECTOR (PRIMARY)..... F2-50, 51, 52
 INJECTOR (SECONDARY)..... F2-50, 51, 52
 INJECTOR..... F1-54, 55, 56
 INJECTOR..... F2-50, 52
 INNER OIL SEAL..... C- 43
 INSTRUMENT CLUSTER..... T-35, 36, 38
 INSTRUMENT PANEL..... S-8, 10
 INTAKE AIR THERMOSENSOR..... F1- 82
 INTAKE AIR THERMOSENSOR..... F2- 80
 INTERLOCK CABLE..... K-162, 163

INTERLOCK SWITCH..... G- 26
 INTERMEDIATE HOUSING..... C-39, 54

K

KNOCK SENSOR..... F2-72, 82

L

LATERAL LINK..... R- 26
 LICENCE LIGHT..... T- 58
 LOCKUP CONTROL SOLENOID VALVE... K- 41
 LOGICON SWITCH..... U-21, 22, 23

M

MAIN FUSE BLOCK..... T- 15
 MAIN RELAY..... F1- 85
 MAIN RELAY..... P- 71
 MASTER CYLINDER..... P-13, 15, 17, 21
 METERING OIL PUMP..... D- 17
 MILEAGE SENSOR..... F1- 86
 MODE CONTROL ACTUATOR..... U- 35
 MOLDING, PROTECTOR, AND GARNISH S- 63
 MOLDING..... S- 63

N

NEUTRAL SWITCH..... F1- 85
 NEUTRAL SWITCH..... F2- 84

O

OIL COOLER(S)..... K-154
 OIL COOLER..... D- 14
 OIL FILTER..... D- 6
 OIL NOZZLES..... D- 19
 OIL PAN..... D-7, 8
 OIL PRESSURE CONTROL VALVE..... D- 15
 OIL PRESSURE SWITCH..... F1- 86
 OIL PUMP..... D-9, 10, 11, 12
 OIL PUMP (ECPS)..... N-22, 23
 OIL PUMP (ESPS)..... N-14, 15
 OUTER OIL SEAL..... C- 43
 OXYGEN SENSOR..... F1-83, 84
 OXYGEN SENSOR..... F2-81, 82

P

P RANGE SWITCH..... K-157
 P/S PRESSURE SWITCH..... F1- 86
 P/S PRESSURE SWITCH..... F2- 84

PARTS INDEX

PARKING BRAKE CABLE..... P- 51
 PARKING BRAKE LEVER..... P-49, 50
 POWER ANTENNA RELAY S-104, 106
 POWER ANTENNA T-104, 106
 POWER BRAKE UNIT .. P-24, 26, 27, 28, 30, 32
 POWER TRANSISTOR U- 33
 PRESSURE REGULATOR F1- 53
 PRESSURE REGURATOR..... F2- 49
 PRESSURE SENSOR..... F1- 84
 PRESSURE SENSOR..... F2- 82
 PROPELLER SHAFT L- 2
 PROPORTIONING BYPASS VALVE
 (PBV)..... P-33, 34

R

RADIATOR..... E- 7
 RADIATOR CAP E- 6
 REAR AXLE..... M-10, 12
 REAR BUMPER S-26, 27
 REAR COMBINATION LIGHT LENS..... T- 60
 REAR DEFROSTER RELAY T- 24
 REAR DISC BRAKES..... P-43, 46
 REAR HATCH S-28, 30
 REAR HATCH GLASS..... S- 59
 REAR HATCH KEY CYLINDER SWITCH... T- 83
 REAR HATCH SWITCH..... T- 83
 REAR HOUSING..... C-39, 56
 REAR ROTOR C- 42
 REAR ROTOR HOUSING C- 42
 REAR SHOCK ABSORBER R-20, 21
 REAR SIDE MAKER LIGHT..... T- 58
 REAR SPEAKER..... T-110, 111
 REAR STABILIZER R- 29
 REAR STATIONARY GEAR..... C- 40
 REAR WINDOW DEFROSTER T-67, 68
 REAR WINDOW DEFROSTER RELAY..... T- 24
 REAR WINDOW DEFROSTER SWITCH T-17, 67
 REAR WIPER AND WASHER S-28, 40
 REC/FRESH SELECT ACTUATOR U- 31
 RECEIVER/DRIER..... U-65, 66
 REFRIGERANT PRESSURE SWITCH..... U- 66
 RELEASE BEARING..... H-14, 16
 RELEASE FORK..... H-14, 16
 REMOTE CONTROL MIRROR..... S-31, 32
 ROOM LAMP..... T- 65

S

SEAT..... S-11, 12
 SEAT BELT..... S-14, 17, 18, 20
 SECURITY LAMP..... T- 84
 SELECTOR KNOB K-162, 164
 SELECTOR LEVER..... K-158, 159, 161, 165
 SELECTOR LEVER..... K-162, 163, 165
 SHIFT-LOCK ACTUATOR K-157

SIDE SEAL..... C- 45
 SLIDING SUNROOF S-67, 68, 70, 71
 SOLENOID VALVE (6PI)..... F1- 44
 SOLENOID VALVE
 (ACCELERATED WARM-UP SYSTEM)... F1- 41
 SOLENOID VALVE (PRC) F1- 58
 SOLENOID VALVE (PRC)..... F2- 54
 SOLENOID VALVE (RELIEF) F1- 64
 SOLENOID VALVE (RELIEF) F2- 59
 SOLENOID VALVE (SWITCH)..... F1- 63
 SOLENOID VALVE (SWITCH)..... F2- 60
 SOLENOID VALVE (VDI) F1- 47
 SOLENOID VALVES..... K- 41
 SPARK PLUGS..... G- 27
 SPEED SENSOR..... K- 41
 SPEED SENSOR..... T- 36
 SPEED SENSOR AND ROTOR P-67, 68, 70
 STARTER..... G-18, 19, 24, 25
 STEERING GEAR AND LINKAGE
 (ECPS)..... N-12, 13
 STEERING GEAR AND LINKAGE (ESPS) N-12, 13
 STEERING LOCK ASSEMBLY N- 11
 STEERING SHAFT N- 11
 STEERING WHEEL N- 10
 STOP AND ROOM LAMP..... T- 64
 STOP AND TAILLIGHT..... T-52, 58
 STOPLIGHT SWITCH..... T- 52
 STOPLIGHT SWITCH..... T- 77
 SUBFRAME R- 31
 SUBLINK R- 28

T

TEMPERATURE CONTROL ACTUATOR... U- 36
 THEFT-DETERRENT CONTROL UNIT T- 80
 THERMOSTAT E- 12
 THERMOSWITCH U- 45
 THROTTLE BODY F2-35, 36
 THROTTLE SENSOR F1- 83
 THROTTLE SENSOR F2- 81
 TIE-ROD END..... N- 6
 TRAILING ARM R- 23
 TRANSMISSION
 (NON-TURBO)..... J1-9, 11, 21, 24, 43
 TRANSMISSION (TURBO)..... J2-10, 12, 23, 26
 TRIM..... S- 21
 TRUNK LID..... S-34, 35
 TRUNK ROOM LAMP..... T- 65
 TURBINE SENSOR..... K- 40
 TURN AND HAZARD LIGHT..... T- 53
 TURN CANCEL AND ANGLE SENSOR T-29, 30

W

WARNING AND CLOCK T-43, 45
 WATER PUMP E- 8

PARTS INDEX

WATER THERMOSENSOR.....	F1- 83
WATER THERMOSENSOR.....	F2- 81
WATER THERMOVALVE.....	F2- 36
WHEELS AND TIRES.....	Q- 4
WINDSHIELD ANTENNA.....	T-107
WINDSHIELD WIPER AND WASHER.....	S-36, 37, 38, 40
WINDSHIELD.....	S-55, 56