

This file is available for free download at <http://www.iluvmyrx7.com>



[www.iluvmyrx7.com](http://www.iluvmyrx7.com)

### PART NUMBER INDEX

This index is listed in the following sequence.

### INDEX DES NOMBRES DE PIÈCES

Cet index a été composé selon la séquence suivante.

### NUMERO INDICE DE PIEZA

Este índice se ordena en la siguiente secuencia.

### TEILENUMMERN

Die Teilenummern setzen sich wie folgt zusammen.

### GENERAL PARTS

EXAMPLE

- 1 Model/Type  
Third, in the sequence of model/types (1st-4th digits)
- 2 Group  
First, in the sequence of group (5th & 6th digits)
- 3 Part  
Second, in the sequence of part (7th-9th digits)

### PIECES GENERALES

EXEMPLE

- 1 Modèle/type  
Troisièmement, séquence du modèle/type (1er à 4ème chiffres)
- 2 Groupe  
Premièrement, séquence du groupe (5ème et 6ème chiffres)
- 3 Pièce  
Deuxièmement, séquence de la pièce (7ème à 9ème chiffres)

### PIEZAS GENERALES

EJEMPLO

- 1 Tipo de modelo  
Tercero, en la secuencia de tipo de modelo (entre las cifras 1ro-4to lugar)
- 2 Grupo  
Primero, en la secuencia de grupo (las cifras en 5to y 6to lugar)
- 3 Pieza  
Segundo, en la secuencia de pieza (entre las cifras 7mo-9no lugar)

### ALLGEMEINE TEILE

BEISPIEL

- 1 Modell/Typ  
Angabe des Modells bzw. Typs (1. bis 4. Ziffer)
- 2 Baugruppe  
Angabe der Baugruppe (5. und 6. Ziffer)
- 3 Teil  
Angabe des Teils (7. bis 9. Ziffer)

①      ②      ③  
┌───┬───┬───┐  
B A O 1    6 0    3 5 0

### STANDARD PARTS

Standard Parts are listed in numerical sequence after General Parts.  
(Note: Those parts which do not have D-Code are not listed in the index.)

### PIECES STANDARD

Les pièces standard sont énumérées selon une séquence numérique, après les pièces générales.  
(Remarque: Les pièces qui ne possèdent pas de code D ne sont pas mentionnées dans cet index.)

### PIEZAS NORMALES

Las piezas normales se numeran secuencialmente después de las Piezas generales.  
(Nota: Las piezas que no tienen un código D no están en el índice.)

### STANDARDTEILE

Die Standardteile sind nach den allgemeinen Teilen mit fortlaufender Numerierung aufgeführt.  
(Hinweis: Teile ohne D-Code sind nicht aufgeführt.)





PART NUMBER INDEX / INDEX DES NUMEROS DE PIECES / TEILENUMMER-INDEX / INOICE DE NUMERO DE PARTES

N370-18-W51	1-I11	N326-18-141A	1-G11		BV01-19-476	1-I13	1758-19-616	1-E14	0338-19-837	1-J12	N350-20-751	1-G5
N349-18-W54	1-J11	N380-18-141	1-G11	*****	0338-19-476	1-I13	1758-19-617	1-E14	BU17-19-838	4-D5	N370-20-751	1-H5
N370-18-W54	1-J11	N318-18-144	1-G11	*	BV01-19-480	1-I13	1758-19-618	1-E14	BU17-19-838A	4-E5	N350-20-752	1-G6
B675-18-W59	1-I11	N326-18-144	1-G11	* 19-000	0338-19-480	1-I13	0338-19-619	1-E14	BU27-19-838	1-K12	N370-20-752	1-D6
N350-18-W60	1-I11	N326-18-151	1-G11	*****	0338-19-486	1-I13	0338-19-621	1-L13	BV09-19-850	1-K12	N326-20-811	2-D8
F285-18-W70	1-I11	N318-18-160B	1-G11		0338-19-487	1-I13	0338-19-622	1-E14	BV09-19-870	1-K12	N318-20-820	1-L4
JE15-18-W70A	1-I11	N326-18-160B	1-G11		0338-19-488	1-I13		1-L13	BV05-19-880A	1-K12	N332-20-820B	1-M6
N351-18-W70	1-I11	N318-18-170B	1-G11		BU17-19-020B	1-C12	0338-19-623A	1-L13	BU17-19-890B	1-K12	N350-20-840A	2-H7
FE2H-18-W77	1-I11	N326-18-170B	1-G11		0842-19-025	1-C12	0338-19-624	1-L13	BV09-19-980A	1-D12	N370-20-840	2-K7
N350-18-W80	1-J11	N318-18-180B	1-G11		BU17-19-027	1-C12	0338-19-631	1-L13	BV09-19-904	1-D12	N332-20-850A	2-K7
N318-18-X00	1-K11	N326-18-180B	1-G11		BV09-19-031	1-G14	0338-19-632	1-L13	BV09-19-910A	1-D12	1480-20-950A	1-L6
N326-18-X00	1-K11	N318-18-190B	1-G11		BV09-19-040	1-G12	0338-19-633	1-L13	BV09-19-920B	1-D12		1-M6
N327-18-X00	1-K11	N326-18-190B	1-G11		BU17-19-050	1-C12	0338-19-634	1-L13	BV09-19-930B	1-D12		
E356-18-X01	1-L11	N350-18-211	4-N4		3649-19-064A	1-C12	0338-19-635	1-L13	BV09-19-933A	1-E12	*****	
N326-18-X05	1-L11	N370-18-211	4-N4		BV09-19-090B	1-C12	0338-19-636	1-L13	BU17-19-940	1-E12	* 21-000 *	
N326-18-X10	1-M11	N326-18-230	4-N4		BV09-19-090C	1-C12	0338-19-639	1-L13	BV09-19-960	1-K12	* *	
N318-18-X20	1-K11	N326-18-237	4-C5		BV03-19-100	1-C12	BV01-19-650	1-E14	BU17-19-961A	1-E12	*****	
N326-18-X20	1-K11	N326-18-251A	1-M11		BV03-19-100A	1-C12	BV01-19-655	1-E14	BV09-19-980	1-E12		
N318-18-X25	1-L11	N327-18-251	1-M11		BV03-19-211	1-C12	0436-19-656	1-E14	BV10-19-980	1-E12		
N326-18-X25	1-L11	N350-18-300B	1-I11		BU01-19-215	1-C12		1-M13	BV10-19-986	1-E12		
											FU01-21-091	1-D13
N326-18-X30	1-K11	N370-18-300B	1-I11		BU46-19-215	1-C12	1758-19-505	1-J13	BU17-19-670	1-F14	FU01-21-097	1-D13
N326-18-X40	1-L11	N336-18-361	1-H11		BU01-19-216	1-C12	3959-19-505	1-J13	0338-19-676	1-F14	BV01-21-112A	1-D13
F225-18-X56	1-K11	N350-18-381	1-H11		BV03-19-220B	1-C12	BV02-19-506	1-J13	BU17-19-701	1-G14	BV01-21-123A	1-D13
N326-18-X56	1-K11	N326-18-397	1-H11		BV03-19-220C	1-D12	3959-19-506	1-J13	0338-19-702A	1-G14	BV02-21-129	1-D13
N326-18-X57	1-L11	N318-18-400A	1-K11		0338-19-223A	1-D12	BV02-19-507	1-J13	BU17-19-703	1-G14	BV01-21-149A	1-D13
F214-18-X60	1-K11	N318-18-400B	1-K11		BV03-19-240B	1-D12	3959-19-507	1-J13	BU17-19-704	1-G14	BV02-21-154	1-D13
N326-18-X60A	1-K11	N326-18-400A	1-K11		BV03-19-240C	1-D12	BV02-19-508	1-J13	0338-19-706	1-G14	BV01-21-155	1-D13
F217-18-X60	1-K11	N326-18-400B	1-K11		0338-19-245A	1-D12	3959-19-508	1-J13	BV09-19-710	1-I12	BV01-21-156	1-D13
N327-18-X60A	1-K11	N327-18-400	1-K11		0338-19-247	1-D12	BV01-19-509	1-J13	0338-19-731	1-H14	BV01-21-195	1-D13
N326-18-X62	1-L11	N327-18-400A	1-K11		0338-19-248	1-D12	0338-19-509	1-K13	BU26-19-732	1-H14	BV01-21-196	1-E13
N326-18-X62A	1-L11	N327-18-401	1-H11		0338-19-255	1-D12	3959-19-509	1-J13	0338-19-733C	1-H14	BU46-21-2F3	1-K12
N326-18-X65	1-K11	JE15-18-51X	4-C5		BU01-19-256	1-G12	BV01-19-510	1-K13	0338-19-734A	1-H14	BV09-21-2J1	4-E5
N327-18-X65	1-K11	AM15-18-520A	1-N11		BU01-19-257	1-G12	1758-19-511	1-K13	B728-19-735	1-I12	BV09-21-2K0	1-L12
F214-18-X66	1-M11	9566-18-520A	1-N11		0338-19-258	1-D12	BV04-19-530	1-K13	0338-19-735	1-I12	BV01-21-201	1-E13
N319-18-X66	1-M11	N251-18-520A	1-N11			1-G12	BV04-19-531	1-K13	0338-19-737	1-I12	BV01-21-202	1-E13
JE01-18-X70	1-M11	N350-18-522	1-N11		BU46-19-3J4	1-I12	BV01-19-533	1-K13	0338-19-739	1-J12	BV01-21-204	1-E13
JF01-18-X70	1-M11	N318-18-59XE	1-N11		BV09-19-310	1-G12	BV04-19-533	1-D14	BV09-19-750	1-N12	BV01-21-207	1-E13
N318-18-X71	1-M11	N318-18-592A	1-N11		BV09-19-310A	1-G12		1-K13	BV01-19-760F	1-N12	BV01-21-211	1-E13
N326-18-X71	1-M11	N318-18-593C	1-N11		0338-19-331A	1-G12		1-K13	0338-19-768	1-N12	BV01-21-213	1-E13
N327-18-X71	1-M11	N318-18-599	4-G11		0338-19-336	1-H12	BU03-19-534	1-D14	BV01-19-771	1-N12	BV01-21-214	1-E13
N318-18-X80	1-L11	N350-18-811	4-C5		0338-19-337	1-H12	BV09-19-540	1-K13	0338-19-772	1-N12	BV03-21-215A	1-E13
N318-18-X80A	1-L11	N326-18-821A	4-C5		0338-19-338	1-H12	BV04-19-560	1-K13	0338-19-773	1-N12	BV01-21-216	1-E13
N320-18-X80	1-L11	N374-18-831	4-C5		0397-19-340	1-H12	BU04-19-565	1-K13	BV01-19-774A	1-N12	BV01-21-217	1-E13
N320-18-X80A	1-L11	N322-18-835A	4-C5		0338-19-341	1-H12	BV04-19-566	1-K13	BV01-19-775A	1-N12	BV01-21-221	1-E13
N326-18-X87	1-M11	N350-18-835	4-C5		0338-19-360B	1-I13	BU02-19-567	1-K13	1758-19-781	1-N12	BV01-21-222A	1-E13
JE01-18-X91	1-L11	PN41-18-840	4-C5		0338-19-361B	1-H12	BU04-19-570	1-K13	BV01-19-785	1-N12	BV01-21-224	1-E13
N326-18-X91	1-L11	2574-18-840	4-C5		BU17-19-363	1-H12	0338-19-590	1-D14	BV01-19-786	1-N12	BV01-21-228A	1-K12
N326-18-X92	1-L11	N326-18-845	4-C5		FT40-19-363	1-H12	0338-19-591	1-D14	BV01-19-787A	1-N12	BV01-21-229A	1-F13
N326-18-X93	1-L11	N350-18-861	4-C5		BU20-19-368	1-H12	0338-19-593	1-D14	BV01-19-788	1-N12	BV01-21-250A	1-K12
E356-18-X95	1-L11	FE30-18-867A	1-E6		BV02-19-381	1-H12	0338-19-594	1-D14	0338-19-791A	1-C13	BU01-21-253	1-K12
N350-18-0FYB	4-H7	N350-18-880	4-C5		3959-19-381	1-H12	0338-19-595	1-D14	BV01-19-792	1-C13	BU01-21-255	1-K12
	4-J7	N351-18-880	4-D5		3959-19-384	1-H12	0338-19-596	1-D14	BV01-19-793	1-C13	BV01-21-261	1-F13
N351-18-0FY	4-H7	N352-18-880	4-D5		BV02-19-385	1-H12	0338-19-598	1-D14	0338-19-795B	1-C13	FU01-21-261C	1-F13
	4-J7	N353-18-880	4-D5		0338-19-385A	1-H12	0338-19-599	1-L13	BV01-19-797A	1-C13	FU01-21-261D	1-F13
N370-18-0FY	4-H7	N370-18-880	4-D5		0338-19-386A	1-H12	BV01-19-6C1	1-L13	BV01-19-798	1-C13	FU01-21-262C	1-F13
N381-18-052	4-J7	N370-18-880A	4-D5		0338-19-388A	1-I12	BV03-19-6C1	1-M13	BV01-19-8A2	1-C13	FU01-21-262D	1-F13
N350-18-052D	4-H7	N381-18-881	4-D5		0338-19-389	1-I12	BV01-19-6C2	1-L13	BV01-19-8A9	1-C13	FU01-21-263C	1-F13
N370-18-052D	4-H7	N383-18-881	4-D5		BV02-19-391	1-I12	BV03-19-6C2	1-M13	BV01-19-8B2	1-C13	FU01-21-263D	1-F13
N387-18-052C	4-H7	N326-18-883	4-D5		1758-19-392A	1-I12	BV01-19-6C3	1-L13	BV01-19-803	1-C13	FU01-21-265C	1-F13
N327-18-057D	4-H7	HE21-18-885A	4-D5		BV01-19-394	1-I12	BV03-19-6C3	1-M13	BV01-19-805C	1-C13	BV01-21-267	1-F13
N332-18-057A	4-J7	N326-18-885A	4-D5		1758-19-394A	1-I12	BV01-19-6C4	1-L13	0338-19-808	1-C13	BV01-21-269	1-F13
N350-18-057	4-H7	N387-18-885A	4-D5		0338-19-395	1-I12	BV03-19-6C4	1-M13	BV01-19-811B	1-C13	BV01-21-271	1-K12
	4-J7	N3A1-18-890	2-E7		1758-19-397	1-I12	BV01-19-6C5	1-L13	BV01-19-811C	1-C13	BU01-21-274	1-K12
N326-18-100B	1-F11	N326-18-890A	2-E7		0338-19-398	1-I12	BV03-19-6C5	1-M13	BV01-19-812A	1-D13	BV01-21-275	1-L12
N327-18-100	1-F11		2-I7		BU67-19-431	1-G14	BV01-19-6C6	1-M13	0338-19-814	1-D13	BU01-21-277	1-L12
N338-18-100	1-F11	N351-18-9E1B	4-D5		BV17-19-431	1-G14	BV03-19-6C6	1-M13	BV01-19-815	1-D13	BU01-21-292A	4-E5
N339-18-100	1-F11	N351-18-9E1C	4-D5		0338-19-432	1-G14	BV01-19-6C7	1-M13	BV01-19-819	1-D13	BU01-21-294	4-E5
N326-18-105	1-G11	N350-18-911B	1-K5		0338-19-433A	1-G14	BV03-19-6C7	1-M13	0338-19-822	1-J12	BU01-21-294	1-F13
N3X4-18-110	1-F11	N380-18-911	1-N5		BU17-19-440	1-G14	BV01-19-6C8	1-M13	BV04-19-823A	1-J12	BU01-21-295	4-E5
N328-18-110	1-F11	N304-18-912	1-I4		BU55-19-440	1-G14	BV03-19-6C8	1-M13	0338-19-825	1-J12	BV01-21-296	1-F13
N329-18-110	1-F11		1-K5		BV45-19-443	1-G14	8T08-19-600	1-D14	0338-19-826	1-J12	BV01-21-297	1-F13
N342-18-110	1-F11		1-N5		0338-19-443	1-G14	0338-19-603	1-D14	0338-19-827	1-J12	BV01-21-299	1-F13
N343-18-110	1-F11	N318-18-921	4-D5		BV09-19-444	4-D5	0338-19-604	1-E14	0338-19-828	1-J12	BV01-21-300A	1-F13
N326-18-115A	1-G11	N361-18-945B	4-C5		0338-19-446	4-D5	0338-19-606	1-E14	0338-19-829	1-J12	BV09-21-3A5	4-E5
N319-18-14Y	4-N7	N361-18-946A	4-C5		0338-19-449	1-G14	0338-19-607	1-E14	0338-19-831	1-J12	BV01-21-301	1-L12
N350-18-14Y	4-N7	N350-18-996	1-K5		BU17-19-450	1-G14	0338-19-609	1-E14	0338-19-832	1-J12	BV01-21-302	1-L12
N326-18-140C	1-G11				BV03-19-460B	1-I13	BU17-19-610	1-E14	0338-19-833	1-J12	BV02-21-302	1-G13
N380-18-140	1-G11				BV03-19-460C	1-I13	1758-19-613	1-E14	B728-19-835	1-J12	BV01-21-303	1-L12
N318-18-141	1-G11				BV01-19-470B	1-I13	1758-19-614	1-E14				



PART NUMBER INDEX / INDEX DES NUMEROS DE PIECES / TEILENUMMER-INDEX / INDICE DE NUMERO DE PARTES

FC02-34-350	2-G6	N350-40-100B	2-F7	0727-41-023	2-H8		F048-43-7A9A	2-K9	FB01-45-380E	2-H9	FB02-49-290B	2-I3
FB01-34-380C	2-G6	N351-40-100B	2-F7	FB01-41-031C	2-H8	*****	F048-43-7B0B	2-K9	FB01-45-510A	2-N7	FB05-49-290B	2-F6
FB01-34-460	2-H6	N362-40-100C	2-F7	W090-41-041	2-H8	*	FB55-43-721A	2-K9	FB44-45-510	2-N7	FB06-49-290B	2-I3
FB01-34-470	2-H6	N367-40-100B	2-F7	0183-41-043	2-H8	* 43-000 *	F051-43-70XB	2-K9	FB01-45-611E	2-D10	FB01-49-460	2-L7
FB44-34-700C	2-L6	N378-40-100A	2-J7	0824-41-051A	2-H8	*	F051-43-708A	2-K9	FB01-45-711B	2-D10	FB01-49-470	2-M7
FB01-34-800G	2-J6	N304-40-161A	2-F7	B092-41-081	2-I8	*****	F051-43-709	2-K9	FB01-45-712D	2-D10	H115-49-570B	2-L7
FB67-34-800C	2-J6	1114-40-161	2-F7		2-K8		F051-43-71YC	2-K9	FC01-45-720	2-D10	B093-49-580	2-L7
FB44-34-900C	2-L6		2-J7	0559-41-081A	2-H8		FB05-43-710B	2-E9	FB55-45-721	2-D10		2-M8
*****		0820-40-166	2-F7	0824-41-084	2-H8			2-G9	FB55-45-722A	2-E10	B603-49-580	2-M8
*	*		2-J7	0727-41-131	2-H8			2-G9	FB55-45-731	2-D10	H115-49-580A	2-C9
* 37-000 *	*	N350-40-200B	2-F7	FB05-41-140A	2-H8		F051-43-72YC	2-K9	FB55-45-732A	2-E10	FB05-49-610A	2-N8
*	*	N351-40-200B	2-F7	0613-41-308	2-M9		FB05-43-720B	2-E9	UA01-45-902	2-H9	FB05-49-620A	2-N8
*****		N362-40-200C	2-F7	H005-41-341	2-L7			2-G9	0866-45-903A	1-E12	GA02-49-638	2-M8
		N367-40-200B	2-G7	F044-41-370A	2-N7	G030-43-029	F051-43-73XB	2-K9	FB01-45-910	2-E10	FB05-49-640A	2-N8
		N378-40-200A	2-J7	8871-41-370	2-N7	FB01-43-031	FB01-43-750	2-M8	FB01-45-910	2-E10	FB01-49-680	2-M8
B002-37-160	2-K6	B322-40-305	2-G7	FB01-41-380	2-N7	FB02-43-031	FC39-43-750C	2-C9	FB67-45-910	2-E10	FB01-49-680A	2-M8
FB68-37-190	2-K6	N326-40-305	2-E7	F044-41-380B	2-N7	FB01-43-040B	F048-43-776C	2-K9	FB01-45-912	2-E10	FB01-49-680	2-M8
FC02-37-190A	2-K6		2-I7	FB01-41-400C	2-L7		FB55-43-799	2-K9	G037-45-913	2-E10	FB01-49-680A	2-M8
FC73-37-190	2-K6	N327-40-305	2-G7	W001-41-612	2-L7	FB01-43-042	FB05-43-800D	2-M8	FB01-45-914	2-E10	0305-49-686B	2-D9
88FF-37-600A	2-M6		2-J7	0813-41-622D	2-L7	0866-43-062	FC06-43-800A	2-C9	8075-45-918	2-E10		2-M7
		N350-40-305	2-G7	H005-41-424	2-L7		FB01-43-810B	2-E9	B180-45-918	2-E10	FB05-49-720	2-N8
88FL-37-600	2-M6		2-J7	H001-41-443	2-H8	FB01-43-063		2-K8			*****	
88FS-37-600	2-M6	N378-40-305	2-E7		2-K8			2-E9	FB01-45-919	2-E10	*	*
FB07-37-90A	2-M6	N380-40-305	2-G7	B312-41-470	2-L7	FB01-43-070E	FB05-43-810	2-G9	G030-45-919	2-E10	* 50-000 *	*
FC01-37-790	2-N6	N378-40-307	2-G7	B312-41-522	2-M7	FB05-43-070A		2-G9			*	*
B210-37-810	2-N6	N326-40-353	1-K4	B312-41-532	2-M7	FB02-43-090A	FB01-43-830A	2-M8	FB01-45-920	2-E10	*****	*****
FB01-37-810	2-N6		2-E7	FB01-41-610	2-C8	1525-43-092	FB44-43-836B	2-C9	FB01-45-930	2-E10		
*****			2-I7	8239-41-619	2-C8	HF05-43-140	FB01-43-840A	2-M8	F048-45-930	2-E10	FC01-50-A30A	3-G3
*	*	N378-40-355	2-G7	B092-41-644	2-C8		FC18-43-840	2-C9	FB01-45-940	2-F10	FC01-50-031	3-F3
* 39-000 *	*	2158-40-355	1-K4	0259-41-644	2-H8	D001-43-152	FB44-43-850B	2-C9	FB55-45-951	2-H9	FB01-50-050A	3-G3
*	*	8118-40-355	2-G7	FB01-41-650A	2-C8		FB44-43-880B	2-C9	FB55-45-961B	2-H9	FB01-50-054	3-F3
*****			2-J7	FC08-41-650	2-C8		FB10-43-900	2-E9	H002-45-961	2-H9	FB01-50-071	3-F3
		8134-40-355	1-N4	FC01-41-660	2-C8	GE68-43-231		2-K8		2-H9	FC01-50-071	3-F3
FB01-39-021A	2-C7		2-J7	FC17-41-660	2-C8	H001-43-301	FB01-43-980	2-E9		2-K9	FB01-50-072	3-F3
		N326-40-357	2-G7	FB44-41-666A	1-N6	FB55-43-310D		2-E9		3-C9	FB01-50-080A	3-F3
FB01-39-022	2-C7	1480-40-375	2-G7	FC17-41-671	2-C8	FB55-43-320D		2-E9	FB01-45-980A	2-F10	FB01-50-090A	3-F3
			2-J7	FA54-41-711A	2-C8	FB55-43-330C		2-E9	* 44-000 *	2-F10	FC01-50-1A0	3-F3
FB01-39-023	2-F3	N332-40-500A	2-I7	FB44-41-770A	1-J4	FB55-43-350A		2-E9	* 44-000 *	2-F10	FC01-50-1B0	3-F3
FB01-39-031	2-C7	N350-40-500B	2-E7	FB44-41-780A	2-G9	FB01-43-360		2-E9	*****		FC01-50-1C0	3-F3
		N326-40-524	2-E7	FB01-41-920A	2-L7	FC06-43-360B		2-G9	*****		FC01-50-1D0	3-F3
B001-39-037B	2-F4	N328-40-524	2-I7	F044-41-920C	2-L7	FB02-43-370	FC01-44-010A	2-M9	*****		FC01-50-1E0	3-G3
			2-H7			FC06-43-370	G030-44-031	2-M9	* 46-000 *		KA01-50-1G2	3-F3
FB01-39-040A	2-C7	N326-40-530B	2-K7	*****		FCY8-43-40Z	FB01-44-033	2-M9			FC01-50-111	3-G3
		N326-40-54XA	2-H7	* 42-000 *		FB02-43-400C	FC01-44-034A	2-M9	*****		FC01-50-112	3-G3
FB67-39-040A	2-C7		2-K7	* 84Y3-43-41Z *		FB02-43-400D	FB01-44-061B	2-M9			FC01-50-132	3-F3
		N327-40-54X	2-H7	*****		B4Y3-43-41Z	FB01-44-062A	2-M9	F062-46-AT0A	2-G10	FB01-50-133	3-G3
3975-39-045	2-C7	N319-40-600B	2-F7			H001-43-443	FC01-44-063	2-M9	GN52-46-AT1B	2-G10	FB01-50-133A	3-G3
			2-J7	BC88-42-045	2-D8	W023-43-504	FC01-44-063A	2-M9	H338-46-AT8	2-G10	FB01-50-133C	3-G3
FB01-39-340A	2-C7	N326-40-640A	2-H7	FC02-42-110A	2-D8	NA23-43-515	FB01-44-150B	2-M9	H338-46-AT9	2-G10	FC89-50-14X	3-F3
			2-K7	FB01-42-210B	2-D8	FB01-43-540	0866-44-187A	2-M9	FC07-46-027	2-G10	FB01-50-140	3-F3
FB67-39-340B	2-C7	N326-40-69XB	2-G7	FB01-42-240E	2-D8	F065-43-540	0866-44-189	2-M9	FC08-46-030A	2-G10	FB01-50-144	3-G3
			2-J7	FB01-42-245A	2-F8	3597-43-542	FB01-44-110E	2-M9	FC07-46-040A	2-G10	3597-50-152	3-H3
FB02-39-350A	2-D7	N326-40-690B	2-G7	FB01-42-247A	2-E8	F065-43-55ZA	FB01-44-439A	2-N9	FB02-46-058C	2-G10	FC01-50-180	3-F3
FC02-39-350	2-C7		2-H7	FB01-42-248	2-F8	B533-43-622	1011-44-439	2-N9	1015-46-085	2-I8	FC01-50-221A	3-H3
FB01-39-364	2-C7	N326-40-815	2-H7	FC02-42-250	2-E8	NA23-43-625		2-C9	*****	2-L8	BF82-50-233	3-G3
		1480-40-815	2-H7	BF67-42-252	2-E8	FC01-43-63XA		2-E9	* 45-000 *	2-G10	FB01-50-280	3-H3
FB02-39-370C	2-D7		2-K7	B853-42-270	2-E8			2-E9	*****	2-G10	G030-50-285	3-H3
FC02-39-370	2-C7	N332-40-823A	2-K7	FB01-42-285	2-E8			2-G9	*****	2-G10	FB01-50-290	3-H3
FC18-39-370	2-C7	N332-40-860C	2-K7	FB01-42-289	2-E8	B533-43-632		2-D9	*****	2-G10	FC01-50-312	3-H3
FC02-39-385	2-C7								*****	2-G10	FC01-50-313	3-H3
*****		N326-40-861A	2-H7	FB01-42-290	2-E8	W023-43-635	FB01-45-111C	2-D10	*****		0187-46-683	2-J8
* 40-000 *	*		2-K7	0223-42-307	1-I4		FB70-45-111	2-D10			1015-46-684A	2-H10
*	*	N332-40-865	2-K7	0866-42-366B	2-D8		FA66-45-125A	1-C5			0604-46-785	2-J8
*****		N350-40-870	2-H7	FB01-42-410B	2-G8	0136-43-635	FB55-45-146	2-D10			*****	
			2-K7	FB01-42-451C	2-G8	FC01-43-64XA	8123-45-146	2-D10				
N326-40-060B	2-E7	N326-40-874B	2-H7	FB01-42-531B	2-E8		FA23-45-181	2-D10			* 49-000 *	
		N326-40-908	2-F7	FB01-42-561A	2-E8	FB01-43-640	FA23-45-182	2-D10				
			2-J7	FB01-42-562	2-F8	FC18-43-640A	FB01-45-280E	2-E9				
N328-40-060B	2-E7	N378-40-908	2-F7	FB01-42-565	2-F8	B001-43-694A	FB55-45-280F	2-G9			*****	
		N380-40-908	2-F7	FB71-42-710	2-E8		FB01-45-291A	2-E9				
N225-40-061	2-E7		2-J7	FB71-42-715	2-E8			2-E9			H260-50-6A7	3-L3
		N326-40-990C	2-H7	FC01-42-720	2-E8	8573-43-694	FB01-45-320	2-G9	FB05-49-060E	2-M5	FB01-50-6A8	3-L3
N326-40-065	2-E7	N332-40-990A	2-K7	FB01-42-761	2-F8	F048-43-7A0J	FB55-45-320H	2-F9	FB01-49-130	2-E3	FC01-50-6RDAPZ	3-D4
				8531-42-762A	2-E8	F048-43-7A2	FC49-45-330C	2-G9	FB01-49-140	2-E3	FC01-50-6RDASG	3-D4
N304-40-073A	2-E7	*****		H260-42-780	2-F8	F048-43-7A3	FC49-45-340B	2-H9	FB02-49-240	2-I3	FC01-50-6ROAUC	3-D4
		* 41-000 *	*	H260-42-790	2-F8	F048-43-7A6B	FB01-45-360C	2-F9	FB05-49-240	2-E6	FC01-50-6ROA5N	3-D4
N304-40-078A	2-F7		*	FB01-42-910A	2-F8	F048-43-7A6	FB55-45-360C	2-H9	8341-49-240	2-E6	FC01-50-6SDAPZ	3-D4
N326-40-080	2-F7		*	FB01-42-980	2-F8	F048-43-7A6	FB01-45-370D	2-F9	FA66-49-250	2-E6	FC01-50-6SDASG	3-D4
		*****	*	FB01-42-985	2-F8	F048-43-7A7		2-H9	FB06-49-250	2-I3	FC01-50-6SDAUC	3-D4
N327-40-080	2-F7		*			F048-43-7A8		2-J9	FA66-49-280	2-F6	FC01-50-6SDA5N	3-D4
			*					2-J9	FB06-49-280A	2-I3	FC01-50-6V0APZ	3-E4

PART NUMBER INDEX / INDEX DES NUMEROS DE PIECES / TEILENUMMER-INDEX / INDICE DE NUMERO DE PARTES

FC01-50-6V0ASQ 3-E4		FC01-51-162A 3-F5	FC04-51-609 3-M4	FC17-51-960APZ 4-L11	FC01-53-170 3-M6	FB67-53-81XA 3-L8
FC01-50-6V0AUC 3-E4		FC01-51-169A 3-F5	FC01-51-6H0A 3-M4	FC17-51-960ASQ 4-L11	FC66-53-170 3-J6	FB67-53-81YA 3-L8
FC01-50-6V0A5N 3-E4	*****	FC33-51-169A 3-F5	FC04-51-6H1 3-M4	FC17-51-960AUC 4-L11	FB01-53-172 3-M6	FC01-53-810 3-L8
FC01-50-6W0APZ 3-E4	* 51-000 *	FC01-51-170A 3-F5	FC01-51-6H2 3-M4	FC17-51-960A5N 4-L11	FC01-53-18X 3-J6	FC01-53-810A 3-L8
FC01-50-6W0ASQ 3-E4	*****	FC33-51-170A 3-F5	FC04-51-6H2 3-M4	FB03-51-962 PZ 4-L11	FC66-53-180 3-J6	FC33-53-810 3-L8
FC01-50-6W0AUC 3-E4		FB01-51-172 3-F5	FC04-51-6H3 3-C5	FB03-51-962 UC 4-L11	FC01-53-190 3-J6	FC01-53-810A 3-L8
FC01-50-6W0A5N 3-F4		FC01-51-180A 3-F5	FC04-51-6H5 3-M4	FB03-51-962 UC 5N 4-L11	FB01-53-192 3-J6	FC66-53-895B 3-L8
FB01-50-601A 3-L3	FC17-51-PJ0APZ 3-M3	FC33-51-180A 3-F5	FC04-51-6H6A 3-M4	FB02-51-963A 4-L11	FB01-53-192 3-J6	FC66-53-91X 3-L8
FB01-50-611C 3-L3	FC17-51-PJ0ASQ 3-M3	88F1-51-270 3-F5	FC04-51-6H7 3-M4	FB02-51-964 4-L11	FB01-53-192 3-J6	FC66-53-910 3-L8
FB01-50-615C 3-L3	FC17-51-PJ0AUC 3-M3	FB67-51-272 3-F5	FC01-51-6H9 3-M4	FB01-51-966B 4-L11	FB01-53-200F 3-M6	FB67-53-917 3-L8
F044-50-650B 3-D6	FC17-51-PJ0A5N 3-M3	FB67-51-273 3-F5	FC04-51-6H9 3-M4	FB02-51-966 4-L11	FB01-53-200G 3-M6	FB67-53-918 3-L8
F044-50-653A 3-D6	FC17-51-PJ2 3-M3	FB01-51-276 3-F5	8AF2-51-610 3-L4	FC17-51-968 4-L11	FB34-53-200F 3-M6	FC01-53-920 3-L8
F044-50-655B 3-D6	FC17-51-PK0BPZ 3-M3	FB01-51-360B 3-F5	FB01-51-611 3-L4	FC17-51-969 4-L11	FB34-53-200G 3-M6	FC33-53-920 3-L8
F044-50-656A 3-D6	FC17-51-PK0BSQ 3-M3	FB01-51-370B 3-F5	FB01-51-621A 3-L4	B129-51-993 3-N3	FC66-53-200 3-D7	FC01-53-930A 3-L8
FC01-50-681APZ 3-D4	FC17-51-PK0BUC 3-M3	G113-51-401 3-J3	FB01-51-622A 3-L4	*****	FC66-53-200A 3-D7	FB67-53-94X 3-L8
FC01-50-681ASQ 3-D4	FC17-51-PK0B5N 3-M3	S972-51-402 3-J3	FB01-51-623 3-H4	* 52-000 *	FB01-53-210J 3-M6	FB67-53-950 3-L8
FC01-50-681AUC 3-D4	FC17-51-PP0APZ 3-M3	FB01-51-403A 3-J3	FB01-51-631A 3-J4	*****	FB01-53-210K 3-M6	FB01-53-951 3-L8
FC01-50-681ASN 3-D4	FC17-51-PP0ASQ 3-M3	FB01-51-404A 3-J3	FB01-51-632A 3-J4	FC01-52-111 3-D7	FB34-53-210H 3-M6	*****
FC01-50-682 PZ 3-E4	FC17-51-PP0AUC 3-M3	FB01-51-405A 3-J3	FB01-51-633 3-L4	FC17-52-111 3-M6	FB34-53-210J 3-M6	* 54-000 *
FC01-50-682 SQ 3-E4	FC17-51-PP0A5N 3-M3	FB01-51-406A 3-J3	8AF2-51-650 3-L4	FC01-52-211 3-D7	FC66-53-240C 3-D7	*****
				FC17-52-211 3-M6	FC66-53-200 3-D7	*****
				FB01-52-310H 3-D6	FC66-53-210 3-D7	*****
				FB01-52-310J 3-D6	FC66-53-210A 3-D7	*****
				FB13-52-310J 3-D6	FB34-53-225 3-M6	*****
				FB13-52-310K 3-D6	FC66-53-240C 3-D7	*****
				FB49-52-310N 3-D6	FC66-53-200 3-D7	*****
				FB49-52-310P 3-D6	FC66-53-200A 3-D7	*****
				8866-52-398A 2-K9	FC66-53-200A 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
					FC66-53-200A 3-D7	*****
					FC66-53-210J 3-M6	*****
					FC66-53-210 3-D7	*****
					FC66-53-210A 3-D7	*****
					FC66-53-225 3-M6	*****
					FC66-53-240C 3-D7	*****
					FC66-53-200 3-D7	*****
				</		





PART NUMBER INDEX / INDEX DES NUMEROS DE PIECES / TEILENUMMER-INDEX / INDICE DE NUMERO DE PARTES

FC66-67-BW1A	4-F7	FB01-67-4C0B	4-D8		FB67-68-29XB02	4-D9	FC04-68-450B02	3-D15	FB67-68-665	4-J10	FB01-68-864	02	4-G10	
FC01-67-SH0D	4-K7	FB01-67-4T0D	4-D8	*****	FB67-68-29XB48	4-D9	FC04-68-450B48	3-D15	FB03-68-666A	4-F10	FB01-68-864	48	4-G10	
FC07-67-SH0D	4-K7	FB01-67-4T0E	4-D8	*	FC01-68-3D1	02	4-H9	FC06-68-450B02	3-D15	4-J10	8003-68-865	65	4-G10	
FC04-67-010G	4-D7	FB02-67-402A	4-I8	* 68-000	FC01-68-3E1	02	4-H9	FC06-68-450B48	3-D15	4-F10			4-L10	
FC09-67-010G	4-D7	FB02-67-406	4-I8	*****	FC01-68-3E3A	4-H9	FC17-68-450B02	3-E15	FB03-68-667A	4-J10	8003-68-865		4-G10	
FC18-67-010F	4-D7	FB03-67-406	4-J8		FC01-68-3P0A02	4-K9	FC17-68-450B48	3-E15	FC02-68-671A02	4-F10			4-L10	
FC66-67-010E	4-F7	FB02-67-408A	4-J8		FC01-68-3P0A48	4-K9	FC17-68-450C02	3-E15	FC02-68-671A48	4-F10	8003-68-865	65	4-G10	
FC67-67-010E	4-F7	FC01-67-421	4-H8		FC01-68-3S0A02	4-K9	FC17-68-450C48	3-E15	FC04-68-671A02	4-F10			4-L10	
FB01-67-012	4-N7	FB02-67-450A	4-H8		FC01-68-3S0A48	4-K9	FC33-68-450B02	3-I15	FC04-68-671A48	4-F10	8006-68-865		3-G10	
S083-67-012A	3-F9	FB02-67-451	4-K8		FC01-68-3S01A	4-H9	FC33-68-450B48	3-I15	FC66-68-671	02	8040-68-865A00		4-J9	
FB01-67-014	4-N7	FB02-67-458B	4-H8		FC01-68-310D02	4-H9	F061-68-450B02	3-D15	FC66-68-671	02	8040-68-865A48		4-J9	
FB02-67-019A	4-N7	FB02-67-480A	4-H8		FC01-68-310D48	4-H9	F061-68-450B48	3-D15	FB67-68-673	02	8042-68-865	00	4-L4	
FB01-67-021	3-G10	FB01-67-481	4-E8		FB01-68-370	02	4-H9	FB67-68-452	3-K15	FB67-68-673	02	4-D9	4-D10	
FC01-67-030D	4-K7	FB02-67-481	4-I8		FB01-68-370	48	4-H9	FB01-68-453	02	B100-68-675	02	4-D9	4-I10	
FC07-67-030D	4-K7	FB01-67-482B	4-E8		FB67-68-370	02	4-L9	FB01-68-453	48	B100-68-675	48	4-D9	4-D10	
FC66-67-030B	4-K7	FB01-67-483	4-E8		FB01-68-370	48	4-L9	FB67-68-678	48	FB67-68-678	48	4-F10	4-I10	
FC67-67-030B	4-K7	FB04-67-485	4-E8		FB01-68-390	02	4-H9	FB67-68-678	48	FC02-68-679	02	4-F10	4-H10	
UB42-67-031	4-N7	FB01-67-488A	4-D8		FB67-68-390	48	4-H9	FB67-68-457	02	FC02-68-679	48	4-F10	4-L10	
FC04-67-050F	4-D7	FB01-67-5A0A	4-G5		FB67-68-390	02	4-L9	FB67-68-457	48	FB01-68-691D02	4-F10	4-J9	4-M9	
FC18-67-050F	4-D7	FB01-67-500C	4-D8		FB67-68-03XB02	4-N8		FB67-68-457	48			4-M9		
FC66-67-050B	4-F7	FB02-67-500	4-H8		FB67-68-03XB48	4-N8	FC04-68-4E0B02	3-C15	FC04-68-463	02	3-E15	FB01-68-691D48	4-J10	
B001-67-051	4-N7	FB04-67-500B	4-H8		FC01-68-030	02	4-L8	3-I15	FC04-68-463	48	3-E15	4-G10	4-M9	
FB01-67-051	2-G8	FB01-67-501C	4-D8		FC01-68-030	48	4-L8	3-C15	FC04-68-463	48	3-E15	4-J10	4-D9	
UB42-67-051	4-N7	H001-67-502	4-D8		FC03-68-030	02	4-L8	3-I15	FB01-68-47X	02	3-E15	FC66-68-693	02	
W029-67-051A	4-N7	H261-67-502	4-D8		FC03-68-030	48	4-L8	3-C15	FB01-68-47X	48	3-E15	FC66-68-693	48	
8545-67-052	3-C11	SA70-67-502	4-I8		FC04-68-030	02	4-L8	3-I15	FB01-68-47X	48	3-E15	FC66-68-693	48	
FB02-67-056	4-H8	S013-67-502	4-I8		FC04-68-030	48	4-L8	3-I15	FB01-68-47X	48	3-E15	FC66-68-693	48	
FB02-67-057	4-H8	S084-67-502	4-D8		FB67-68-032	02	4-N8	3-K15	FB67-68-505B	4-I11	3-K15	FB01-68-710A02	4-H9	
F055-67-06YB	4-F7	S092-67-502	3-K3		FB67-68-032	48	4-N8	3-K15	FB67-68-520E02	4-I11	3-K15	FB01-68-710A48	4-H9	
FB01-67-060B	4-E7	4116-67-502	4-D8		FB01-68-040	02	4-L8	3-I15	FB67-68-520E48	4-I11	3-K15	FB67-68-710	02	
FB02-67-060B	4-E7		4-I8		FB01-68-040	48	4-L8	3-C15	FB67-68-520E48	4-I11	3-K15	FB67-68-710	48	
FB67-67-060A	4-L4	FB01-67-503B	4-D8		FB01-68-042	4-L8		3-I15	FC01-68-520A02	4-I11	3-K15	B003-68-712	4-I9	
G001-67-061	4-N6	FB02-67-503A	4-E8		0810-68-070E	4-M10		3-C15	FC01-68-520A48	4-I11	3-K15	B235-68-712	4-I9	
FC01-67-070F	4-H7	FB04-67-503A	4-D8		F057-68-071	4-M10		3-I15	FC01-68-520A48	4-I11	3-K15	B235-68-719	4-I9	
FC07-67-070F	4-H7	FB01-67-504A	4-E8		FB67-68-095A	4-N8		3-I15	FC01-68-520A48	4-I11	3-K15	FA54-68-719B	4-I11	
FC17-67-070G	4-H7	G043-67-506	3-D9		FC01-68-1A0B02	4-E9		3-N14	FC01-68-524	02	4-I11	FB01-68-719	4-I11	
FC66-67-070B	4-J7	G033-67-509	4-I8		FC01-68-1A0B48	4-E9		3-N14	FC01-68-524	02	4-I11	FB01-68-719	4-I11	
FC67-67-070P	4-J7	G044-67-509	4-I8		FC01-68-1B0B02	4-E9		3-N14	FC01-68-524	02	4-I11	FB01-68-719	4-I11	
N351-67-071A	2-F8	FB01-67-510	4-E8		FC01-68-1B0B48	4-E9		3-N14	FC01-68-524	02	4-I11	FB01-68-719	4-I11	
FC01-67-072A	4-C8	FB02-67-510	4-H8		FC01-68-1C0A02	4-E9		3-N14	FC01-68-524	02	4-I11	FB01-68-719	4-I11	
GC77-67-072	3-C11	FB01-67-517	4-I8		FC01-68-1C0A48	4-E9	FB01-68-415	3-C15	FC01-68-61H102	4-D10	FB67-68-8C1	02	4-K10	
HE20-67-072	4-C8	FB01-67-519A	4-E8		FC01-68-1D0A02	4-E9		3-I15	FC01-68-61H148	4-D10	FB67-68-8C1	48	4-K10	
FB01-67-073A	4-C8	H260-67-519A	3-E6		FC01-68-1D0A48	4-E9	FC04-68-420B02	3-D15	FC01-68-61K102	4-D10	FB67-68-8C2		4-J11	
H261-67-073	4-C8		4-D8		FB01-68-151	02	4-E9	3-D15	FC01-68-61K148	4-D10			4-K10	
FB01-67-099	4-H7	FB02-67-520A	4-I8					3-D15	FC01-68-61L	4-D10	FC01-68-850	02	4-I9	
	4-H7	FC01-67-560A	4-M5		FB01-68-151	48	4-E9	3-D15	FC01-68-61L2	4-D10	FC01-68-850	48	4-I9	
	4-J7	FB01-67-564	4-M5		UB39-68-153	4-E9		3-D15	B100-68-615	3-C7	G225-68-8X2	4-N8	4-M9	
	4-H7	FC01-67-564	4-M5		FB01-68-155	4-E9		3-D15		4-D10	UB39-68-805	3-F15	4-D9	
	4-J7	FC66-67-564	4-M5		FB67-68-160A02	4-G9		3-D15		4-I10		3-K15	4-D9	
	4-E7	FC01-67-566	4-M5		FB67-68-160A48	4-G9		3-D15	FB02-68-620A	4-D10		3-K15	4-J9	
	4-E7	FC01-67-567	4-M5		FC01-68-160C02	4-E9		3-I15	FB04-68-620A	4-D10		3-K15	4-M9	
	4-G7	FC01-67-568	4-M5		FC01-68-160C48	4-E9		3-I15	FB67-68-620A	4-D10		3-K15	4-M9	
	4-L7	FB01-67-569	4-M5		FB67-68-170A02	4-G9		3-I15	FB67-68-622	4-D10		3-K15	4-M9	
	4-L7	NA01-67-7F0A	4-M5		FB67-68-170A48	4-G9		3-I15	FB01-68-624	4-D10		3-K15	4-M9	
	4-L7	NA01-67-7G0A	4-M5		FC01-68-170C02	4-F9		3-I15	FB01-68-625	4-D10		3-K15	4-M9	
	4-L7	B311-67-740	4-M5		FC01-68-170C48	4-F9		3-I15	FB01-68-632	4-D10		3-K15	4-M9	
	4-L9	H270-67-740	4-E5		FC01-68-190A02	4-F9		3-I15	FB01-68-632	4-D10		3-K15	4-M9	
	4-E7	H320-67-740	4-E5		FC01-68-190A48	4-F9		3-I15	FB01-68-636A	4-E10		3-E13	4-L10	
	4-G7	H430-67-740	3-N16		FB67-68-201	4-C9		3-I15	FB01-68-637	4-E10		3-E13	4-L10	
									FB01-68-642	4-E10		3-E13	4-H10	
S083-67-253	4-C8		4-E5		FB67-68-21XC02	4-C9	3-N14	3-N14	FB01-68-646A	4-E10	FC33-68-82XA07	4-K10	S083-68-865A09	4-L10
S113-67-254A	4-C8		4-M5		FB67-68-21XC48	4-C9	3-N14	3-N14	FB01-68-647	4-E10	FB67-68-831B07	4-J10	S083-68-865A48	4-H10
FB01-67-280C	4-I7	H432-67-740	4-M5		FC01-68-210A02	4-F9	3-N14	3-N14	FB01-68-652	4-E10	FB67-68-832	4-K10		4-L10
	4-F8	H440-67-740	4-M5		FC01-68-210A48	4-F9	3-N14	3-N14		4-I10	FB67-68-845	02	4-K10	4-L10
	4-F8	H320-67-742	4-E5		G030-68-213B	4-L8	3-N14	3-N14	FB01-68-653	4-E10	FB67-68-845	48	4-K10	4-L10
	4-F8	H311-67-744	4-F5		B100-68-215A	4-F9	3-N14	3-N14		4-I10	FB01-68-85X		4-I9	4-L10
	4-F8	FC01-67-780A	4-N5		0208-68-230	4-M10	3-N14	3-N14	FB01-68-658	4-E10			4-I9	4-L10
	4-H8	FC33-67-830	4-N5		FB67-68-24YA02	4-C9	3-N14	3-N14	FB03-68-658	4-E10	FC01-68-85Y	02	4-I9	4-K9
	4-F8	FC01-67-880A	4-N5		FB67-68-24YA48	4-C9	3-N14	3-N14	FB67-68-658	4-E10	FC01-68-85Y	48	4-I9	4-K9
	4-F8	FC33-67-9A1	4-N5		FB67-68-25YA02	4-C9	3-N14	3-N14	FB67-68-658	4-E10	FC04-68-85Y	02	4-I9	4-K9
	4-F8	FC66-67-9A2	4-N5		FB67-68-25YA48	4-C9	3-N14	3-N14	FB67-68-658	4-E10	FC04-68-85Y	48	4-I9	4-K9
	4-F8	FC66-67-9A3	4-N5		FB67-68-261B02	4-C9	3-N14	3-N14	FB03-68-661A	4-E10	FC04-68-85Y	48	4-I9	4-K9
	4-G8	FB01-67-980E	4-I7		FB67-68-261B48	4-C9	3-N14	3-N14		4-I10	FC04-68-87Y	02	4-I9	4-K9
	4-F8		4-J7		FB67-68-271B02	4-C9	3-N14	3-N14	F046-68-661B	4-E10	FC04-68-87Y	48	4-I9	4-K9
	4-F8				FB67-									



PART NUMBER INDEX / INDEX DES NUMEROS DE PIECES / TEILENUMMER-INDEX / INDICE DE NUMERO DE PARTES

FC13-88-160A48 3-D12	F044-88-833 3-C13	99656-10050 2-L6			
FC70-88-160 02 3-D12	3-I12	99656-10055 2-L6			
FC70-88-160 48 3-E12	BA49-88-860 3-I12	99656-10060 2-M6			
FC72-88-160 02 3-N12	FB68-88-970 3-C13	99700-5100 4-E11			
FC72-88-160 48 3-N12	*****	99701-2070 3-H5			
FB69-88-161 02 3-N12	*****	99701-3270 3-E5			
FB69-88-161 48 3-N12	* 90-000 *	99701-4278 3-E5			
FC01-88-161A02 3-E12	* ***** *	99701-4278Y 3-L4			
FC01-88-161A48 3-E12	*****	99701-5050 3-J5			
FC03-88-161A02 3-E12	90620-17635 2-K6	99701-6030 3-C10			
FC03-88-161A48 3-E12	90620-17636 3-H10	99701-6038 3-H5			
FC70-88-161A02 3-E12	90620-35706 2-K6	99701-6040 3-H15			
FC70-88-161A48 3-E12	90620-65706 2-K6	99701-6050 3-M4			
FB44-88-162 3-N12	90620-66705 2-K6	99701-6050 3-K5			
FC01-88-162 3-E12	90623-06705 2-K6	99705-1107 4-D7			
FC03-88-162 3-E12	90623-46705 2-K6	*****			
FC13-88-163A 3-E12	*****	* 99-000 *			
FC34-88-163 3-N12	*****	* ***** *			
FC11-88-177A02 3-E12	*****	99705-1115 4-F7			
FC11-88-177A48 3-E12	* 99-000 *	99705-1130 4-D7			
FC13-88-177 02 3-E12	* ***** *	99236-0571 1-C4			
FC13-88-177 48 3-E12	*****	99351-04999 1-I6			
F044-88-177A02 3-N12	99236-0571 1-C4	99963-6310 1-M9			
F044-88-177A48 3-N12	99351-04999 1-I6	99963-6315 1-M9			
FB46-88-180 02 3-F12	99351-05150 2-F10	99963-6330 1-M9			
FB46-88-180 48 3-F12	99351-05400 2-F10	99963-6930 1-E10			
FB69-88-180 02 3-N12	99351-06130 2-D8	99963-6940 1-E10			
FB69-88-180 48 3-N12	99351-06999 1-N6	99963-6950 1-E10			
FC01-88-180 02 3-F12	99351-08999 2-F10	99963-6960 1-E10			
FC01-88-180 48 3-F12	99358-08999 2-F10	99963-6970 1-E10			
FC03-88-180 02 3-F12	99359-0813 1-C5	*****			
FC03-88-180 48 3-F12	99359-0814 1-D5	* STANDARD PARTS *			
FC07-88-180 02 3-F12	99359-0822 1-D5	* ***** *			
FC07-88-180 48 3-F12	99359-0826P 2-D10	99541-00403 2-D9			
FB46-88-181 02 3-F12	99541-00403 2-D9	99541-00707 1-N12			
FB46-88-181 48 3-F12	99541-01105 1-E4				
FB69-88-181 02 3-N12	99541-01201 1-G12				
FB69-88-181 48 3-N12	99541-01252 1-E5				
FC01-88-181 02 3-F12	99541-01401 2-K5				
FC01-88-181 48 3-F12	99541-01601 1-E7				
FC03-88-181 19 3-F12	1-H7				
FC03-88-181 48 3-F12	1-K12				
FC07-88-181 02 3-F12	99541-03501 4-N4				
FC07-88-181 48 3-F12	99586-08166 1-F9				
FC07-88-181 02 3-G12	1-G12				
FC07-88-181 48 3-G12	1-I9				
FC01-88-183 3-G12	99606-22030 1-C8				
FC03-88-183 3-G12	99611-1500 2-L7				
FC01-88-312 3-G12	99636-01110 2-K6				
FC01-88-313A 3-G12	99636-04130 2-K6				
FB46-88-330 02 3-G12	99636-04140 2-K6				
FB46-88-330 48 3-G12	99651-04060 2-M6				
FC07-88-330 02 3-G12	99651-74050 2-K6				
FC07-88-330 48 3-G12	99655-90005 2-K6				
FB46-88-331 02 3-G12	99655-90010 2-L6				
FB46-88-331 48 3-G12	99655-90015 2-L6				
FC07-88-331 02 3-G12	99655-90020 2-L6				
FC07-88-331 48 3-G12	99655-90025 2-L6				
FC07-88-331 02 3-G12	99655-90030 2-L6				
FC07-88-331 48 3-G12	99655-90035 2-L6				
FC07-88-331 02 3-G12	99655-90040 2-L6				
FC07-88-331 48 3-G12	99655-90045 2-L6				
FC07-88-331 02 3-G12	99655-90050 2-L6				
FC07-88-331 48 3-G12	99655-90055 2-L6				
FC07-88-331 02 3-G12	99655-90060 2-L6				
FC07-88-331 48 3-G12	99656-10005 2-L6				
FC07-88-331 02 3-G12	99656-10010 2-L6				
FC07-88-331 48 3-G12	99656-10015 2-L6				
FC07-88-331 02 3-G12	99656-10020 2-L6				
FC07-88-331 48 3-G12	99656-10025 2-L6				
FC07-88-331 02 3-G12	99656-10030 2-L6				
FC07-88-331 48 3-G12	99656-10035 2-L6				
FC07-88-331 02 3-G12	99656-10040 2-L6				
FC07-88-331 48 3-G12	99656-10045 2-L6				



## ALPHABETICAL INDEX \*\*\* ENGLISH \*\*\*

BRACKET, OVERHEAD CONSOLE	3-K5	BULB'A', CLUSTER SWITCH	4-I5	CAP, CRANK ANGLE SENSOR	4-C5	CLIP	2-G8	CLIP, OIL TUBE	1-O7
BRACKET, P. B. VALVE	2-G9	BULB'A', METER SET	3-H10	CAP, DAMPER	2-G6		2-H9		1-G7
BRACKET, PIPE	1-E12	BULB'B', CLUSTER SWITCH	4-I5	CAP, FILLER	2-E8		2-J3	CLIP, OPENER CABLE	3-F6
BRACKET, PIPE HOLDER	2-K9	BULB'B', WARNING UNIT	3-C10		2-K5		2-J8		4-H8
BRACKET, QUARTER TRIM	4-I11	BULB'C', CLUSTER SWITCH	4-I5	CAP, GARNISH	3-K10		2-L5	CLIP, PIPE	1-E12
BRACKET, REAR	1-L11	BULB'D', CLUSTER SWITCH	4-I5	CAP, HINGE-H. L. RETRACTABLE	3-I4		2-M3		2-E10
BRACKET, RELAY	4-E5	BUMPER, BOUND	2-G6	CAP, HORN	2-K4		2-M9		2-F9
	4-N5	BUMPER, REAR	3-H3	CAP, HUB	2-M5		3-C11		2-H9
BRACKET, RELAY-SET PLATE	3-H6	BUSH	1-C8	CAP, IDLE SWITCH	1-F5		3-C14		3-T16
	3-J6		1-I4	CAP, LOCKING	3-N4		3-D3		3-L16
BRACKET, SET-S. ROOF FRAME	4-E4		2-C8	CAP, OIL FILLER	1-E3		3-D14		4-E8
BRACKET, STAB-RR	2-H4		2-H8		1-G3		3-F3	CLIP, QUARTER TRIM	4-I11
BRACKET, STABILIZER	2-G6		2-H10	CAP, PARK BRAKE LEVER	2-M9		3-G6	CLIP, RR. PILLAR TRIM	4-C9
BRACKET, SUB TANK	1-M7		2-I8	CAP, RADIATOR	1-M7		3-G10	CLIP, SEAL RUBBER-INT. CLR	1-L4
BRACKET, SUPPORT-H. T. CORD	1-G11		2-L8	CAP, REAR SPOILER	4-L11		3-G14	CLIP, SLIDE	4-E9
BRACKET, T/MISSION MT	2-C7		3-L12	CAP, RUBBER	2-D6		3-H3	CLIP, STEP MOULD	3-M3
	2-D7	BUSH SET, CHANGE LEVER	1-C11	CAP, SEAL	4-H8		3-H14	CLIP, STOP LAMP-HI. MOUNT	3-F5
BRACKET, TRUNK BOARD	4-K10		1-L10	CAP, SPRING	1-C11		3-I14	CLIP, TRIM	4-D9
BRACKET, VACUUM PIPE	2-C9		2-D9		1-L10		3-J3		4-F9
BRACKET, WASHER TANK	4-E8		2-M7	CAP, SUB TANK	1-M10		3-J14		4-O9
BREAKER	4-D7		2-N8	CAP, TANK	1-N7		3-J16		4-J9
	4-F7		3-L11		3-K3		3-L14		4-J11
BREATHER	2-J3	BUSH, HINGE	3-L11		4-E8		3-M3		4-L8
	2-N3	BUSH, INNER	4-I8		4-I8		3-M16		4-N8
BREATHER, AIR	1-H12	BUSH, RUBBER	2-E5	CARRIER, DIFFERENTIAL	2-J3		3-K3	CLIP, TUBE-REGULATOR GUIDE	3-G14
BREATHER, AIR-T/MISSION	1-F9		2-H5		2-N3		3-N4	CLIP, TUBULAR	3-L5
	1-I9	BUSH, RUBBER-LWR ARM	2-H6	CARRIER, FRONT	1-K13		4-C8	CLIP, WATER HOSE-BY. A.C.V.	1-L4
BRKT NO. 1(L), GRILLE-TRIM	3-C15	BUSH, RUBBER-RR DAMPER	2-F4	CARRIER, OVER DRIVE	1-N13		4-D6	CLIP, WEATHERSTRIP-OUTER	3-H15
BRKT NO. 1(R), GRILLE-TRIM	3-I15	BUSH, RUBBER-RR LOWER ARM	2-I4	CARRIER, REAR	1-K13		4-D8		3-N14
	3-C15	BUSH, STABILIZER-RR	2-H4	CARTRIDGE, OIL FILTER	1-E7		4-D10	CLIP, WIRE-BONNET	3-E6
BRKT SET, DASH POT-THROT	1-J5	BUSHING, LOWER ARM	2-I4		1-H7		4-H8		4-D8
	1-M5	BUSHING, RUBBER-FRT	2-H6	CASE	2-K3		4-I9	CLIP, B' PIPE-REAR WASHER	4-H8
BRKT(L), BELT-FORMING	4-H4	BUTTON, HORN	2-M4	CASE(L), BLOWER	3-G16		4-I10	CLUTCH, DIRECT	1-M13
BRKT(L), COAT HANGER	4-C11	BUTTON, RELEASE	2-M9	CASE(L), HEATER UNIT	3-E16		4-K3	CLUTCH, FRONT	1-I13
BRKT(L), DAMPER STAY-QTR	3-M7	BUZZER, TOP MOTOR	4-J4	CASE(R), BLOWER	3-G16		4-L6	CLUTCH, MAGNET	4-E3
BRKT(L), FORMING BAR	3-D8			CASE(R), HEATER UNIT	3-E16		4-L9		4-H3
BRKT(L), INST.	3-E8	*****		CASE, CHANGE CONTROL	1-C11		4-L11	CLUTCH, ONE WAY	1-D14
BRKT(L), MOTOR-SIDE FRAME	3-N8	* C *			1-L10		4-M3		1-N13
BRKT(L), PILLAR GARNISH	3-G7	*****		CASE, CONTROL UNIT	4-M5		4-N7	CLUTCH, REAR	1-K13
BRKT(L), SILENCER-S/PANEL	3-I8			CASE, COOLING UNIT	4-I3		4-N8	COCK, DRAIN	1-M7
	3-M8	CABLE(R), R.-PARK	2-M9		4-J3		3-C3	COIL & IGNITER, LEADING	1-F11
BRKT(L), STOPPER-R. FRAME	3-N8	CABLE, ACCEL	2-C8	CASE, LAMP	3-D10	CLIP (R)	3-C14	COIL & IGNITER, TRAILING	1-F11
BRKT(L), TRIM-QTR PANEL	3-J7	CABLE, F/LID OPENER	2-G8	CASE, METER	3-H10	CLIP KIT, ST. GEAR	3-I14	COIL, FIELD	4-E3
BRKT(R), BELT-FORMING	4-H4	CABLE, INTER LOCK	2-G10	CASE, OVER DRIVE	1-L12	CLIP SET, DRIVE SHAFT	2-H5		4-H3
BRKT(R), DAMPER STAY-QTR	3-M7	CABLE, OPENER	2-G8	CASE, T/MISSION	1-F9	CLIP SET, INNER HANDLE	2-D3	COIL, IGNITION-LEADING	1-F11
BRKT(R), FORMING BAR	3-N7	CABLE, PARKING-FRT	2-M9		1-G12		3-D14	COIL, IGNITION-TRAILING	1-F11
BRKT(R), INST.	3-C8	CABLE, SPEEDOMETER	3-G10	CASING, DIFFERENTIAL	1-H9	CLIP(L), TUBE-LOWER	3-J14	COLLAR, CLUTCH REL.	1-C9
BRKT(R), MOTOR-SIDE FRAME	3-L8	CALIPER(L), FRT BRAKE	2-E6		2-D4	CLIP(L), TUBE-UPPER	4-D4		1-D9
BRKT(R), PILLAR GARNISH	3-G7	CALIPER(L), RR BRAKE	2-H3	CASING, STOPPER	2-M3	CLIP(R), TUBE-LOWER	4-D4	COLLAR, COMP. BRKT	1-C8
BRKT(R), SILENCER-S/PANEL	3-H8		2-I3		2-C7	CLIP(R), TUBE-UPPER	4-D4	COLLAR, COMP. BRKT-PULLEY	1-C8
	3-K8	CALIPER(R), FRT BRAKE	2-E6	CATALYST, THREE WAY	2-O7	CLIP, AIR BAG	3-G13	COLLAR, HARNES-SIDE SILL	3-F9
BRKT(R), STOPPER-R. FRAME	3-L8	CALIPER(R), RR BRAKE	2-H3	CEILING, TOP	2-I7	CLIP, AIR HOSE	1-D6	COLLAR, LONG-DRIVING&DIFF.	2-C4
BRKT(R), TRIM-QTR PANEL	3-I7		2-E6	CHAIN, OIL PUMP	4-L8		1-G5		2-K3
BRKT, AIR FLOW METER	1-F5	CANISTER	1-C5	CHAMBER(L), EXTRACTOR	1-C7	COMPRESSOR	1-H6	COMPRESSOR	4-D3
	1-H5	CAP	1-K6	CHAMBER(R), EXTRACTOR	1-F7		1-G5	COMPRESSOR, AIR CON.	4-D3
BRKT, IGNITION COIL	1-G11		1-T4	CHAMBER, AIR	3-C6	CLIP, ANTILOCK BRAKE SYS.	1-L6		4-G3
BRKT, MOTOR-ANTENA	4-L6	CHANNEL(L), DIVISION-DOOR	3-L13		1-G6	CLIP, CABLE	2-K9	CONDENSER	3-J16
BRKT, SURGE TANK	1-J4	CHANNEL(L), GLASS RUN	3-I13	CHAMBER(L), EXTRACTOR	1-K6		2-C8		3-M16
BRKT'A', CONTROL UNIT	3-H8	CHANNEL(R), DIVISION-DOOR	3-L13	CHAMBER(R), EXTRACTOR	1-K6		2-N9	CONNECTING, SHELL	1-N13
	3-K8	CHANNEL(R), GLASS RUN	3-I13	CHARGE, AIR COOLER	1-L4		3-J4	CONNECTOR	1-I5
BRKT'B', CONTROL UNIT	3-I8	CHECKER, DOOR	3-I14	CHASSIS, AIR COOLER	1-L4	CLIP, CORD-CLUSTER SWITCH	4-C8		1-L6
	3-M8	CLAMP, BATTERY	1-N11	CLAMP, AIR COOLER	3-C14	CLIP, DASHBOARD INSULATOR	4-J5	CONNECTOR SET	1-J11
BRUSH	1-J11	CLAMP, HOSE	1-F5		3-I14		4-D10	CONNECTOR, AIR TUBE	1-H7
BRUSH, YOKE	1-M11		1-L4	CLAMP, HOSE-A.I. PIPE SIDE	1-L4	CLIP, DEFLECTOR LINK	4-I10	CONNECTOR, CHANGE LEVER	2-G10
BULB	3-C10	CAP SET, RESERVE TANK	2-C9	CLAMP, SPARE TIRE	2-M6	CLIP, DEFROSTER GRILLE	4-F4	CONNECTOR, DISCHARGE VALVE	4-D3
	3-E5		2-L7	CLIP	1-C5	CLIP, DRAIN HOSE-FRONT	3-L10	CONNECTOR, SUCTION VALVE	4-D3
	3-F16	CAP, BLEEDER SCREW	2-D6		1-E12	CLIP, DRAIN HOSE-SUN ROOF	4-D4	CONSOLE, OVERHEAD	3-K5
	3-H5		2-I3	CLAMP, BATTERY	1-F13	CLIP, FLEXIBLE HOSE	2-E9	CONSOLE, REAR	3-D11
	3-H10	CAP, BLIND	1-F5		1-E12		2-G9	CONTACT, HORN	4-H5
	3-H15		1-H4	CLAMP, HOSE	1-L4	CLIP, FLUID HOSE	2-M9	CONTROL, HEATER	3-F16
	3-J5		1-J4		1-L4	CLIP, FUEL PIPE	2-N7	CONTROL, REMOTE-AUDIO	4-H6
	3-J10		1-K5	CLAMP, HOSE	1-M4	CLIP, GARNISH	4-L8	CONTROLLER, AE SYSTEM-DISC	4-G6
	3-L4		1-K6	CLAMP, HOSE	3-G13	CLIP, GARNISH-INST.	3-K10	CONVERTER, CATALYST	2-E7
	3-M4		2-D8		1-E6	CLIP, HARNES-OUT. HANDLE	3-D14		2-I7
	3-N14		2-D4	CLAMP, HOSE-A.I. PIPE SIDE	1-E6		3-J14	CONVERTER, MONOLITH	2-G7
	4-N9		2-D8	CLAMP, SPARE TIRE	1-C5	CLIP, INTER LOCK CABLE	3-D14	CONVERTER, TORQUE	1-C12
BULB & SOCKET	3-C10		2-D10	CLIP	1-F13	CLIP, M.OIL TUBE	1-J7	COOLER, OIL	1-J7
	3-D11				1-G6		3-J14	CORD	2-F8
BULB, AUTO CLOCK	3-C10				1-K5	CLIP, INTER LOCK CABLE	2-G10	CORD SET, HI. TENSION	1-G11
BULB, FRONT FOG LAMP	3-N4				1-K6	CLIP, OIL HOSE	1-E7	CORD, EARTH	4-C7
BULB, INTERIOR MIRROR	3-K5				2-C8		1-H7	CORD, FRONT FOG LAMP	3-N4
	4-E11				2-D4		1-J7		
	4-N10				2-D8				
					2-D10				

## ALPHABETICAL INDEX \*\*\* ENGLISH \*\*\*

CORD, HIGH TENSION (L-1)---	1-G11	COVER, DOOR BODY-----	3-G14	CUSHION(L), FRT SEAT-----	3-D12	DUCT, FRESH AIR-----	1-I5	FASTENER, TRIM-SLIDE ROOF---	4-F4
CORD, HIGH TENSION (L-2)---	1-G11	COVER, DUST-----	3-L14		3-E12			FASTENER, TURN-SIDE LID---	4-I9
CORD, HIGH TENSION (T-1)---	1-G11		1-C8	CUSHION(R), FRT SEAT-----	3-N12	*****		FEEDER & COVER-----	4-L6
CORD, HIGH TENSION (T-2)---	1-G11		1-I3		3-L11	* E *		FEEDER-ANTENNA-----	4-L6
CORD, HORN-ST. WHEEL-----	2-M4		1-L3		3-L12	* * *		FEEDER, ANTENNA-----	4-L6
CORD, LICENSE LAMP-----	3-H5		2-C5	CUSHION, RUBBER-----	3-M11	*****		FILM, PANEL-NO. 1-----	3-F16
CORD, SHORT-----	4-K7		2-D5		3-G14			FILTER, FUEL-----	1-C5
CORD, SHORT-FRT SEAT BACK---	3-C13	COVER, DUST-CLUTCH FORK---	2-F3		3-J10	ELECTRIC UNIT, A.B.S.-----	2-K9	FILTER, FUEL PUMP-----	2-D8
CORD, HEATER-----	3-E16		2-G5	CYL., CLUTCH MASTER-----	3-L14	ELEMENT, AIR CLEANER-----	1-G5	FINISHER, REAR-----	3-N5
COTTER, PAPER-----	1-C10	COVER, END-----	1-C9	CYL., CLUTCH RELEASE-----	2-L7	END, CONTROL LEVER-----	1-K10	FLANGE-----	1-D14
	1-J10		1-D9	CYL., TANDEM MASTER-----	2-L7	END, S/ROD(1ST&2ND)-----	1-N10	FLANGE, COMPANION-----	2-J3
COUPLER, SOLENOID VALVE---	1-L12	COVER, FRONT-----	2-E5		2-C9	END, S/ROD(3RD&4TH)-----	1-K10	FLANGE, DRIVE-----	2-N3
COVER-----	1-I4		2-H5		2-N8		1-N10	FLANGE, REAR AXLE-----	2-F3
	2-M9	COVER, FRONT CLUTCH-----	1-J3				1-K10	FLOAT-----	2-C9
	4-H3		1-M3				1-N10	FOAM(L), ENGY. ABS.-RR BUMP---	3-H3
COVER (L), SERVICE-RR FLOO	3-F9	COVER, FRONT ALTERNATOR---	1-C9	*****		END, SHIFT-----	1-N10	FOAM(L), ENGY. ABS-FRT BUMP---	3-G3
COVER (R), SERVICE-RR FLOO	3-F9		1-D9	* D *		END, SHIFT ROD(O/TOP&REV.)	1-K10	FOAM(R), ENGY. ABS.-RR BUMP---	3-H3
COVER(L), BELT-----	4-C9	COVER, FUSE BLOCK-----	1-I11	* * *		ENGINE, SHORT-----	1-C3	FOAM(R), ENGY. ABS-FRT BUMP---	3-G3
COVER(L), CLUSTER SWITCH---	4-I5		4-D7	*****		EQUALIZER, GRAPHIC-----	1-D3	FORK, BRAKE-----	2-I8
COVER(L), DUST-----	2-N5	COVER, HOLE-----	4-F7			EVAPORATOR-----	4-I6	FORK, CLUTCH-----	2-K8
COVER(L), DUST-DOOR TRIM---	3-E15		3-C9	DAM(C), AIR-SKIRT-----	4-K11	EYE BOLT KIT, ST. GEAR---	4-J3	FORK, CLUTCH RELEASE-----	1-D9
COVER(L), GARNISH-INST.---	3-J15		3-D9	DAM, AIR-SKIRT-----	4-K11		2-F5	FORK, SHIFT-----	1-K10
COVER(L), HINGE-----	3-L10	COVER, HOLE-CLUSTER SWITCH	3-F10	DAM, FRT. WSHLD GLASS-----	4-C4		2-H5	FORK, SHIFT(1ST&2ND)-----	1-K10
COVER(L), HOLE-DASH. INSU.	4-D10	COVER, HOLE-H.FRAME&FEADER	4-I8	DAM, RR. WINDOW GLASS-----	4-N3		2-I5	FORK, SHIFT(3RD&4TH)-----	1-K10
COVER(L), IN. HANDLE-----	3-C14	COVER, HOLE-LIFT GATE-----	3-D9	DAMPER-----	3-E10			FORK, SHIFT(5TH & REVERSE	1-D11
	3-I14		3-D9	DAMPER(L), FRONT-----	2-I6			FRAME(L), BACK-FRT-----	4-G12
COVER(L), KNUCKLE-----	3-E12	COVER, HOLE-QTR TRIM-----	4-I11	DAMPER(R), FRONT-----	2-I6			FRAME(L), CUSHION-FRT-----	3-E12
	3-N12	COVER, HORN PAD-----	2-K4	DAMPER, DYNAMIC-----	1-C10			FRAME(L), LAMP LID-----	3-N12
COVER(L), LAP BELT-----	4-D10	COVER, IG. COIL-LEADING---	1-F11	DAMPER, REAR-----	1-T10	FABRIC COVERING, ROOF PANE	4-H4	FRAME(L), LAMP LID-----	3-H4
COVER(L), LINK-----	4-C9	COVER, IG. COIL-T-1-----	1-F11	DASH POT-----	1-K5	FABRIC, TOP-SOFT TOP-----	4-H4	FRAME(L), REAR SIDE-----	3-I8
COVER(L), PASSING HOLE-----	3-H4	COVER, IG. COIL-T-2-----	1-F11		1-N5	FACE, FRONT BUMPER-----	3-F3		3-I8
COVER(L), POCKET-DOOR TRIM	3-E15	COVER, JACK-----	4-I9	DECK(L), FLOOR-----	3-F9	FAN & FAN DRIVE-----	1-M7		3-N8
	3-J15	COVER, KNOB-HINGE-----	4-E9	DECK(R), FLOOR-----	3-F9	FAN DRIVE-----	1-M7	FRAME(L), REAR SIDE-UPPER---	3-N8
COVER(L), RAIL-FRT-----	4-E9	COVER, MAIN FUSE BLOCK-----	4-H7	DEFLECTOR-----	4-E4	FAN, ADDITIONAL-----	1-K7	FRAME(L), SIDE-FRONT-----	3-E7
COVER(L), RAIL-RR-----	4-E9		4-J7	DIAL, LUMBAR SUPPORT-----	3-H12	FAN, COOLING-----	1-L7		3-N6
COVER(L), RETRACTOR-FRONT---	4-E10	COVER, MOTOR-----	3-G16	DIAPHRAGM-----	1-J12	FAN, MOTOR-----	3-G16	FRAME(L), SIDE-OUTER-----	3-K7
COVER(L), RETRACTOR-REAR---	4-E10	COVER, MOTOR-SLIDING ROOF---	4-F4	DIAPHRAGM, VACUUM-----	2-C4	FASTENER-----	3-G3	FRAME(R), BACK-FRT-----	3-M11
COVER(L), SIDE-----	3-N10	COVER, OIL PUMP-----	1-D12	DIFFERENTIAL-----	1-C9		3-G4	FRAME(R), CUSHION-FRT-----	3-M12
COVER(L), SIDE NO. 2-----	4-K9	COVER, OPENER-FLOOR MAT---	4-F10	DISC, CLUTCH-----	1-D9		3-J13	FRAME(R), LAMP LID-----	3-H4
COVER(L), T/END TRIM-----	4-C9	COVER, OVER HEAD CONSOLE---	4-G10	DISPLAY, SECURITY-ALARM---	4-G5		3-M13	FRAME(R), REAR SIDE-----	3-H8
COVER(R), BELT-----	4-I5	COVER, REAR-ALTERNATOR---	1-I11	DISTRIBUTOR(P), FUEL-----	1-E5		3-N3	FRAME(R), REAR SIDE-UPPER---	3-L8
COVER(R), CLUSTER SWITCH---	2-M5	COVER, RELAY-----	4-N5	DISTRIBUTOR(S), FUEL-----	1-E5		3-N5	FRAME(R), REAR SIDE-UPPER---	3-L8
COVER(R), DUST-----	2-N5	COVER, ROD-----	1-C11	DISTRIBUTOR, OIL-----	1-E14		3-N13	FRAME(R), SIDE-FRONT-----	3-D7
	3-E15		1-L10	DOWEL, TUBULAR-----	1-E3		4-F9	FRAME(R), SIDE-OUTER-----	3-I7
COVER(R), GARNISH-INST.---	3-K10	COVER, SEAL-COWL PANEL---	3-D9	DRIVING & DIFF.-----	2-J3		4-G10	FRAME(R), SIDE-OUTER-----	3-I7
COVER(R), HINGE-----	4-C9	COVER, SEAL-SHROUD-----	3-G4	DRUM, CLUTCH-----	2-N3		4-H10	FRAME(RR. L), FRONT-----	3-I8
COVER(R), HOLE-DASH. INSU.	3-C14	COVER, SERVICE HOLE-----	3-D9	DRUM, CONNECTING-----	1-I13		4-J9	FRAME(RR. R), FRONT-----	3-K8
COVER(R), IN. HANDLE-----	3-I14	COVER, SERVICE HOLE-CLUST.	3-F10	DRUM, DIRECT-----	1-N13		4-J11	FRAME, BACK WINDOW-----	4-J4
COVER(R), KNUCKLE-----	3-M12	COVER, SERVO-----	1-I12	DRUM, REAR CLUTCH-----	1-K13		4-K10	FRAME, GLASS HATCH-----	4-K3
	4-D10	COVER, SET-----	2-M5	DUCT NO. 1(L), LAP-VENT.---	3-G11		4-L4	FRAME, INST. PANEL-----	3-K10
COVER(R), LAP BELT-----	4-C9	COVER, SOCKET-F. FOG LAMP---	3-M4	DUCT NO. 1(R), LAP-VENT.---	3-G11		4-L10	FRAME, PIPE-UPPER-----	3-I16
COVER(R), LINK-----	3-H4	COVER, SOUND PROOF-----	4-L6	DUCT NO. 2(L), LAP VENT.---	3-G11		4-L11	FRAME, SLIDING ROOF-----	4-E4
COVER(R), PASSING HOLE-----	3-E15	COVER, STEERING SHAFT-----	2-C5	DUCT(L), 'A' AIR-----	3-N4		4-M9	FRAME, SUB-----	2-J4
COVER(R), POCKET-DOOR TRIM	3-E15	COVER, SUB-C. P. UNIT-----	4-M5	DUCT(L), AIR-----	3-M4		4-N6	FUSE(100A)-----	4-J7
	3-J15	COVER, THERMOSTAT-----	1-L7	DUCT(L), AIR-BRAKE PIPE---	2-E9		3-M13		4-D7
COVER(R), RAIL-FRT-----	4-E9	COVER, TOP-----	1-C12		2-G9	FASTENER(L)-----	3-M13	FUSE(15A)-----	4-D7
COVER(R), RAIL-RR-----	4-E9	COVER, UNDER-----	1-H9	DUCT(L), AIR-----	3-D16		3-M13	FUSE(30A)-----	4-F7
COVER(R), RETRACTOR-----	4-E10	COVER, UNDER CLUTCH HOUS.-	1-D9	DUCT(L), AIR-SHOWER-----	3-G11		3-D6	FUSE(60A)-----	4-J7
COVER(R), RETRACTOR-FRONT---	4-E10	COVER, UNDER-FRONT-----	3-E9	DUCT(L), SIDE DEMIST.---	3-G11		4-F9	FUSE(7.5A)-----	4-D7
COVER(R), SIDE-----	3-N10	COVER, VALVE BODY-----	1-D13	DUCT(R), 'A' AIR-----	3-M4		3-C15		4-F7
COVER(R), SIDE NO. 2-----	4-K9	COVER, VENT-----	1-C9	DUCT(R), 'B' AIR-----	3-M4		3-I15		4-H7
COVER(R), T/END TRIM-----	4-D6	COVER, WHEEL CORE-----	2-K4	DUCT(R), AIR-----	3-M4		3-I6		4-J7
COVER, ACTUATOR-----	1-G5		2-M4	DUCT(R), AIR-BRAKE PIPE---	2-E9		3-K6		4-J7
COVER, AIR CLEANER-----	1-I5	COVER, WIPER ARM-REAR-----	4-I8	DUCT(R), AIR-----	2-G9		3-L3		4-D7
	3-D13	COVER, WIPER MOTOR-----	4-H8	DUCT(R), SHOWER-----	3-D16		4-D9		4-F7
COVER, ANCHDR-----	1-F9	COVER 'A'(L), FRAME-G. HATCH	4-M3	DUCT(R), SIDE DEMIST.---	3-G11		3-G3		4-F7
COVER, BEARING-----	1-H9	COVER 'A'(R), FRAME-G. HATCH	4-L3	DUCT, AIR-----	1-H5		3-F15		4-F7
	1-C11	COVER 'A', HOLE-----	4-M3		3-C16		3-K15		4-F7
COVER, BLIND-----	1-I9	COVER 'B'(L), FRAME-G. HATCH	4-D10	DUCT, AIR-RADIATOR SHROUD---	3-I6		4-H10		4-F7
	1-L10	COVER 'B'(R), FRAME-G. HATCH	4-L3		3-K6		4-J9		4-F7
COVER, BOX-BATTERY-----	1-N11	COVER 'B', HOLE-----	4-D10	DUCT, CENTER-----	3-G11		4-L10		4-F7
COVER, BRACKET-DAMPER STAY	4-L3	COVER 'I', HYDRAULIC UNIT---	2-J9	DUCT, DEFROSTER-----	3-C16		4-M9		4-F7
COVER, CLUTCH-----	1-C9	COVER 'L', HYDRAULIC UNIT---	2-J9	DUCT, FRESH AIR-----	1-F5		4-L10		4-F7
	1-D9	COWLING, FAN-----	1-M7		1-G5		4-M9		4-F7
COVER, COLUMN-LOWER-----	3-D10	COWLING, RADIATOR-----	1-M7		1-H5		4-L8		4-F7
COVER, COLUMN-UPPER-----	3-D10	CUP, SECONDARY-----	2-D9						
COVER, DAMPER STAY-----	4-K3								
COVER, DIAL-----	3-H12								
	3-I12								

## ALPHABETICAL INDEX \*\*\* ENGLISH \*\*\*

GARNISH(L), SAIL-IN-----	4-N10	GASKET, SPOILER-----	4-L11	GRILLE(L), EXTRACTOR-----	3-C6	GUSSET, FRONT FLOOR PAN---	3-M8	HOLDER(UP.), ROD-IN. HANDLE	3-C14
GARNISH(R), DOOR-----	3-K15	GASKET, SPRING CAP-----	1-C11	GRILLE(L), SPEAKER-----	3-J10	*****		HOLDER, BONNET STAY-----	3-I14
GARNISH(R), SAIL-IN-----	4-E11		1-L10	GRILLE(L), SPEAKER-T/TRIM-	4-K9	* * * * *		HOLDER, BONNET STAY-SHROUD	3-E6
GARNISH, TAIL PIPE-----	4-N10	GASKET, STOP LAMP-HI. MOUNT	3-F5	GRILLE(L), VENT.-DOOR TRIM	3-F15	* H *		HOLDER, BRUSH-----	3-E6
	2-H7	GASKET, SURGE TANK-----	1-H4		3-K15	* * * * *		HOLDER, CLUTCH-----	1-M11
	2-K7	GASKET, THERMO-----	1-K5	GRILLE(R), COWL-LOWER-----	3-N5			HOLDER, FUSE-----	2-N7
GARNISH, TOP-FRONT-----	4-L8		1-M5	GRILLE(R), DEF. NOZZLE-----	3-L10				4-D7
GARNISH, TOP-REAR-----	4-L8	GASKET, THERMOSTAT COVER--	1-L7	GRILLE(R), DEMISTER-----	3-G11				4-F7
GARNISH, UPPER-----	3-K10	GASKET, TUBE-CLIP-----	4-D4	GRILLE(R), EXTRACTOR-----	3-C6			HOLDER, HINGE-GRILLE-----	4-H9
GASKET-----	1-D13	GASKET, TURBOCHARGER-----	1-N4	GRILLE(R), SPEAKER-T/TRIM-	4-K9			HOLDER, JACK HANDLE-----	2-M6
	1-H4	GASKET, UNDER COVER-----	1-H9	GRILLE(R), VENT.-DOOR TRIM	3-F15				3-E14
	1-I5	GASKET, VAC. POWER ASSIST--	2-C9		3-J15			HOLDER, KEY CYLINDER-----	3-G10
	1-I12		2-M8	GRILLE, COWL-----	3-N5			HOLDER, MOTOR-H.L. CLEANER-	3-D10
	1-J7	GASKET, VAPOR VALVE-----	2-F8	GRILLE, EXTRACT.-T.S. TRIM	4-G10			HOLDER, NO. PLATE-----	3-F3
	1-L6	GASKET, WATER DRAIN-INTER.	1-E3	GRILLE, SPEAKER-----	4-N6			HOLDER, P.B. VALVE-----	2-C9
	1-L7		1-G3	GRILLE, SPEAKER-FRT-----	3-C15				2-M8
	1-M4	GASKET, WATER PUMP-----	1-K7	GROMMET-----	1-E5			HOLDER, PIN-----	4-F11
	1-M11	GASKET 'A', REAR BUMPER-----	3-H3		3-K14			HOLDER, PIPE-----	2-E10
	1-N4	GASKET 'A', REAR BUMPER-----	3-H3		4-C16				2-F9
	1-N4	GAUGE UNIT, OIL PRES.-----	4-N4		3-D9				2-F10
	2-D8	GAUGE, FUEL TANK-----	2-F8		3-F9				2-H9
	2-F7	GAUGE, OIL LEVEL-----	1-F3		4-J16				1-K12
	2-G7		1-H3		4-K3				2-E5
	2-H8	GEAR-----	1-K12		3-N16				2-H5
	2-J7	GEAR SET, FINAL-----	2-J3	GROMMET, AIRFLOW METER-----	1-F5				4-13
	2-K8		2-N3		1-H5				2-E10
	3-D4	GEAR, COUNTER-----	2-N3	GROMMET, DRAIN HOSE-----	3-M16				3-J3
	4-D3		1-H10	GROMMET, KNOB-METER SET---	3-H10				3-J3
	4-J8	GEAR, COUNTER REVERSE-----	1-N0	GROMMET, PROTECTOR-----	2-F7				2-E10
	4-N4		1-H10	GROMMET, SCREW-----	2-I7				4-13
GASKET & SEAL KIT-----	1-J14		1-M9		4-C15				3-J3
GASKET KIT, COMPRESSOR---	4-G3	GEAR, COUNTER SHAFT-----	1-H10		4-F15				2-E10
GASKET NO.2, IN. MANIFOLD-	1-H4		1-M9		3-G4				2-E10
	1-J4	GEAR, DIFF. SIDE-----	2-K3		3-H15				2-F10
GASKET SET, ENGINE-----	1-C3	GEAR, DRIVE-----	1-E4		3-I13				2-F10
	1-D3	GEAR, DRIVE OIL PUMP-----	1-E4		3-I15				4-F7
GASKET SET, SUB-ENG.-----	1-C3	GEAR, DRIVEN-----	1-D9		3-K15				3-F10
	1-D3		1-G12		3-L14				3-E9
GASKET(L)-----	3-G11	GEAR, INTERNAL-----	1-H7		3-O16				3-C7
GASKET(L), F.COMB.-----	3-L4		1-I9		4-E9				3-E9
GASKET(R)-----	3-G11	GEAR, INTERNAL-STARTER---	1-I9		4-F9				3-E7
GASKET(R), F.COMB.-----	3-L4	GEAR, MAIN DRIVE-----	1-D14		4-I9				3-E7
GASKET, A.C.V.-----	1-E6		1-K13	GROMMET, SCREW-F. WIND.MLD	4-L9				3-M10
GASKET, A.C. VALVE-----	1-D6	GEAR, OVER DRIVE-----	1-K11	GROMMET, SCREW-QTR TRIM---	3-L3				4-L4
GASKET, B.A.C. VALVE-----	1-I6	GEAR, OVER TOP-----	1-E10	GROMMET, SCREW-R.COMB.---	4-C9				3-K13
	1-M6		1-K9	GROMMET, SCREW-REAR SPOILE	3-E5				4-I11
GASKET, BLIND COVER-----	1-I9	GEAR, REVERSE-----	1-N13	GROMMET, SCREW-ROLL B. GARN	4-L11				4-G7
GASKET, CAP-----	2-E8	GEAR, REVERSE IDLE-----	1-I10	GROMMET, SCREW-S. SPLR 'A'	3-C6				4-J5
GASKET, COVER PLATE-----	1-C11		1-N9	GROMMET, SCREW-S. SPLR 'A'	4-K11				4-D7
GASKET, DRUM SUPPORT-----	1-L10	GEAR, STATIONARY-FRT.-----	1-G10	GROMMET, SCREW-S. SPLR 'B'	4-K11				4-F7
GASKET, EX. MANIFOLD-----	1-K12	GEAR, STATIONARY-RR.-----	1-M9	GROMMET, SCREW-S. SPLR 'B'	4-K11				4-L4
GASKET, EXH. PIPE-CONVERTER	1-K4	GEAR, STEERING-----	1-H10	GROMMET, SCREW-S. SPLR 'C'	4-K11				4-K4
	2-E7		1-N9	GROMMET, SCREW-T/SIDE TRIM	4-D9				4-C6
GASKET, EXHAUST PIPE-----	2-I7	GEAR, SUN-----	1-D4		4-F9				4-C6
GASKET, EXTENSION-----	2-I7	GEAR, SUN-----	4-G8	GROMMET, WASHER TANK-----	3-J3				1-D5
GASKET, FILLER PIPE-----	1-I12	GEAR, 1ST-----	1-D14		4-I9				1-16
GASKET, FRONT COVER-----	1-C9	GEAR, 2ND-----	1-I10	GUARD(L), MUD-----	4-D8				1-N6
	1-J3	GEAR, 3RD-----	1-N9	GUARD(R), MUD-----	3-E7				2-F8
	1-M3	GENERATOR, SPEED PULSE---	1-F3	GUARD, HARNESS-FRONT-----	3-N6				2-F10
GASKET, HINGE-LIFT GATE---	4-K3	GLASS(L), DOOR-FRT-----	1-H3	GUIDE(L), REAR-----	4-F10				3-E16
GASKET, IN. MANIFOLD-----	1-H4	GLASS(L), QUARTER-F. DOOR---	1-H3	GUIDE(L), REG.-POWER WIND.	4-J10				2-G9
	1-J4	GLASS(R), DOOR-FRT-----	2-D5	GUIDE(R), REAR-----	3-E4				3-C16
GASKET, KEY CYLINDER-----	3-D3	GLASS(R), QUARTER-F. DOOR---	2-G5	GUIDE(R), REG.-POWER WIND.	3-F14				3-C16
GASKET, LICENSE-----	3-H5	GLASS, BACK WINDOW-----	1-K13	GUIDE, OIL-----	4-E4				3-C16
GASKET, LICENSE LAMP-----	3-H5	GLASS, FRONT-WARNING UNIT-	1-G10	GUIDE, POLE-NO. 1-----	3-M12				3-C16
GASKET, METERING OIL-----	1-D7	GLASS, WINDSHIELD-----	1-F10	GUIDE 'A' (L), GLASS-----	3-I13				3-C16
	1-G7		1-L9	GUIDE 'A' (R), GLASS-----	3-I13				1-D6
GASKET, O/DRIVE CASE-----	1-L12	GRILLE(L), DEF. NOZZLE-----	1-E10	GUIDE 'B' (L), GLASS-----	3-I13				1-G5
GASKET, OIL CAP-----	1-E3	GRILLE(L), DEMISTER-----	1-K9	GUIDE 'B' (R), GLASS-----	3-I13				1-G6
GASKET, OIL FILLER PIPE---	1-H3		4-E5	GUSSET(L), CROSSMEMBER NO1	3-J6				1-H5
GASKET, OIL PAN-----	1-J3		3-I13	GUSSET(L), HINGE PILLAR---	3-E8				1-H6
	1-J12		3-L13	GUSSET(L), INST. PANEL-DASH	3-D8				1-H6
	1-M3		3-L13		3-F8				1-H6
GASKET, OIL PIPE-----	1-F7		3-L13	GUSSET(L), LOCK TOWER-----	3-J8				1-L6
	1-M4		4-C4	GUSSET(L), WHEEL HOUSE-----	3-F8				2-F8
GASKET, OIL PUMP-----	1-C12		4-N3	GUSSET(R), CROSSMEMBER NO1	3-J6				3-C16
GASKET, OIL STRAINER-----	1-C7		3-C10	GUSSET(R), HINGE PILLAR---	3-C8				3-J16
	1-F7		4-N3	GUSSET(R), LOCK TOWER-----	3-I8				3-M16
GASKET, RR. COMB.-----	3-F5		3-L10	GUSSET(R), WHEEL HOUSE-----	3-D8				4-G4
GASKET, RR. SIDE TURN-----	3-H5		3-G11	GUSSET, FRONT FLOOR-----	3-N8				4-F4
GASKET, SEAL-----	3-H3								
GASKET, SHUTTER VALVE-----	1-I4								

## ALPHABETICAL INDEX \*\*\* ENGLISH \*\*\*

HOSE, EVAPORATION-----	2-E8	HUB SET, CLUTCH-3RD & 4TH-	1-E10	JOINT, HOSE-----	4-D8			LEVER, SELECT-----	1-G14
HOSE, FLEXIBLE-----	2-E9	HUB(L), TOE CONTROL-OUTER-	1-K9	JOINT, PIPE-----	4-I8	*****		LEVER, THROTTLE-----	2-G10
	2-G9	HUB(R), TOE CONTROL-OUTER-	2-E3		1-F3	* * * * *			1-J5
HOSE, FLEXIBLE-HIGH-----	2-N7	HUB, CLUTCH-----	2-E3		1-H3	* * * * *			1-M5
	3-I16		1-C10		2-E9	* * * * *			3-H4
HOSE, FLEXIBLE-LOW-----	3-L16		1-F10		2-G9			LID(L), LAMP-----	4-N8
	3-I16		1-I10		2-J9			LID(L), TOP TRIM-----	4-N8
HOSE, FUEL-----	3-L16		1-K9	JOINT, RUBBER-----	1-L4	LABEL, BATTERY-----	4-H11	LID(R), LAMP-----	3-H4
	1-C5		1-L9		1-N4	LABEL, BONNET STAY-----	4-G11	LID(R), TOP TRIM-----	4-N8
	1-D5	HUB, O/DRIVE CLUTCH-----	1-N13	JOINT 'L'-----	3-K3	LABEL, CAUTION-----	4-G11	LID, CONSOLE-----	3-E11
	2-D10	HUB, REAR CLUTCH-----	1-K13	JUNCTION(L), CORNER-Q/PANE	3-D8	LABEL, BURGLAR ALARM-----	4-G11	LID, FUEL FILLER-----	2-G8
HOSE, FUEL MAIN-----	2-F10	HUB, W. PUMP PULLEY-----	1-K7	JUNCTION(R), CORNER-Q/PANE	3-J7	LABEL, CAUTION-----	4-G11	LID, INNER-STORAGE BOX-----	4-C10
	1-C5	HUB, WHEEL-----	2-M5		3-I7	LABEL, CAUTION-BATTERY BOX	4-G11	LID, OUTER-STORAGE BOX-----	4-C10
	2-D10	HYDRAULIC UNIT, A B S-----	2-J9		3-N7	LABEL, CAUTION-RETRACTABLE	4-G11	LID, SIDE-TRUNK ROOM-----	4-I9
HOSE, FUEL RETURN-----	1-C5					LABEL, EMISSION-----	4-H11		4-L9
HOSE, JOINT-FILLER PIPE-----	2-D8					LABEL, INDICATOR-----	3-D10	LID, TRUNK-----	3-G6
HOSE, JOINT-FUEL TANK SIDE	2-E8					LABEL, OIL-----	4-G11	LIGHTER, CIGAR-----	4-G5
HOSE, OIL-----	1-E12					LABEL, TEMPORARY TIRE-----	4-G11	LINER, HEAD-SOFT TOP-----	4-I4
	1-J7					LABEL, TIRE-----	4-G11	LINK SET, MODE-----	3-E16
HOSE, OIL-OIL PUMP-----	1-D12					LABEL, UNLEADED FUEL-----	4-G11	LINK SET, TEMP-----	3-E16
HOSE, PRESSURE-----	2-K5					LABEL, VAC. DIAPHRAGM-----	4-H11	LINK(L), DEFLECTOR-----	4-E4
HOSE, RETURN-----	2-K5					LABEL 'A', CAUTION-A/B-----	3-G13	LINK(R), DEFLECTOR-----	4-E4
HOSE, VACUUM-----	1-D12	IGNITER, IG. COIL-LEADING---	1-H11	KEY-----	1-C7		4-G11	LINK, CONNECTING-----	2-H3
	1-H11	IGNITER, IG. COIL-TRAILING---	3-D12		1-D14		3-G13	LINK, CONTROL-LWR ARM-----	2-I4
	1-G6	INDICATOR-----	2-C9		1-F7	LABEL 'B', CAUTION-A/B-----	3-G13	LINK, CONTROL-STAB-----	2-H4
	1-H6	INDICATOR, LEVEL-----	2-M8		1-I10	LAMP SET(L), FRT COMB-----	3-L4		2-J6
	1-I6		2-C9	KEY SET-----	4-E3	LAMP SET(L), RR. COMB-----	3-E5	LINK, LATERAL-----	2-F4
	1-K6	INJECTION, FUEL-M. P. ELECT.	2-C7	KEY SUB SET(L), DOOR-----	3-C3	LAMP SET(L), SIDE TURN-----	3-L4	LINK, SUB-LOWER ARM-----	2-J4
	1-M6	INSULATOR-----	2-F8	KEY SUB SET(R), DOOR-----	3-D3	LAMP SET(R), FRT COMB-----	3-E5	LINK, WIPER-----	4-F8
	2-C9		2-H7	KEY SUB SET, GLOVE-----	3-D3	LAMP SET(R), SIDE TURN-----	3-L4	LOCK(L), DOOR-----	3-C14
	2-D8		2-K7	KEY SUB SET, IG. SWITCH-----	3-E3	LAMP SUB SET(L), HEAD-----	3-G4		3-I14
	2-M8		3-F9	KEY SUB SET, LIFT GATE-----	3-E3	LAMP SUB SET(R), HEAD-----	3-G4	LOCK(L), GLASS HATCH-----	4-L3
HOSE, VENT-----	2-F8	INSULATOR NO. 2, FRONT-----	3-F9	KEY SUB SET, ST. LOCK-----	3-E3	LAMP(L), COURTESY-DR TRIM-----	3-H15	LOCK(L), HINGE TOP-----	4-K4
HOSE, VENT -PURGE CONT. V.	1-H6	INSULATOR NO. 3, FRONT-----	3-F9	KEY SUB SET, STOWAGE-----	3-E3		3-N14	LOCK(L), TOP-----	4-K4
HOSE, VENTILATION-----	1-C5	INSULATOR(L)-----	4-E10	KEY SUB SET, TRUNK-----	3-D3	LAMP(L), F. FOG-----	3-N4	LOCK(R), DOOR-----	3-C14
	1-H6	INSULATOR(L), BONNET-----	4-E10	KEY, BLANK-----	3-D3	LAMP(L), SIDE TURN-RR-----	3-H5		3-I14
	1-L6	INSULATOR(L), CROSSMEMBER-	4-F10	KEY, BLANK-PRIMARY-----	3-E3	LAMP(R), COURTESY-DR TRIM-----	3-N14	LOCK(R), GLASS HATCH-----	4-K3
	1-N4	INSULATOR(L), TIRE HOUSE-----	4-J10	KEY, FLY WHEEL-----	1-E4		3-N4	LOCK(R), HINGE TOP-----	4-K4
HOSE, WATER-----	1-G6		3-F9	KEY, PRIMARY-----	3-C3	LAMP(R), F. FOG-----	3-N4	LOCK(R), TOP-----	4-J4
	1-K6	INSULATOR(R)-----	4-E10	KEY, SECONDARY-----	3-C3	LAMP(R), SIDE TURN-RR-----	3-H5	LOCK, BONNET-----	3-E6
	1-L7	INSULATOR(R), BONNET-----	4-E10	KEY, SYNCHRONIZER-----	1-F10	LAMP, CARGO ROOM-----	3-J5	LOCK, CONSOLE-REAR-----	3-E11
	1-M6	INSULATOR(R), CROSSMEMBER-	4-E10	KEY, WOODRUFF-PULLEY-----	1-K9	LAMP, COURTESY-----	3-J5	LOCK, LID-----	3-G6
HOSE, WATER BY-PASS-----	1-M6	INSULATOR(R), TIRE HOUSE-----	4-F10	KNOB (R), DOOR LOCK-----	3-G14	LAMP, LICENSE-----	3-H5	LOUVER, CENTER-----	3-G11
HOSE, WATER SUB TANK-----	1-M7		4-I10	KNOB (R), DOOR LOCK-----	3-K14	LATCH, TRUNK END TRIM-----	3-F5	LOUVER, LAP-LOWER PANEL-----	3-M10
HOSE, WATER-B.A.C.V.&R.H.-	1-G6	INSULATOR, BONNET-----	4-E10		3-L14		3-J5		
	1-H6	INSULATOR, DASHBOARD-----	4-D10	KNOB NO. 1-----	3-F16	LENS & BODY(L)-----	3-L4		
HOSE, WATER-B. A. C. V. & T. B.	1-G6	INSULATOR, DASHBOARD-----	4-I10	KNOB(L), DOOR LOCK-----	3-G14	LENS & BODY(L), RR. COMB.---	3-E5		
HOSE, WATER-T/C WATER-PIPE	1-M4	INSULATOR, EX. MANIFOLD-----	1-K4		3-L14		3-F5		
HOSE 'A', WASHER-----	4-D8	INSULATOR, FUEL DIST.-----	1-E5	KNOB(L), KNUCKLE-----	3-K11	LENS & BODY(R)-----	3-L4		
HOSE 'B', WASHER-----	4-D8	INSULATOR, HEAT-----	1-M4		3-K12	LENS & BODY(R), RR. COMB.---	3-E5		
HOSE 'C', WASHER-----	4-E8	INSULATOR, HEAT-FRONT-----	3-E9	KNOB(R), KNUCKLE-----	3-K11	LENS NO. 2(L), RR. COMB.---	3-F5		
HOUSING(L), F. COMB.-----	3-L4	INSULATOR, HYDRAULIC UNIT-	2-J9		3-K12	LENS NO. 2(R), RR. COMB.---	3-F5		
HOUSING(L), FOG LAMP-----	3-M4	INSULATOR, INJECTION-----	1-E5	KNOB, BALANCE-TUNER-----	4-H6	LENS(L), COURTESY LAMP-----	3-H15		
	3-N4	INSULATOR, OIL PAN-----	1-G12	KNOB, BALANCE-TUNER & DECK	4-H6		3-N14		
HOUSING(L), LAMP-LID HINGE	3-I4	INSULATOR, ROD-ANTENNA-----	4-K6	KNOB, CHANGE LEVER-----	1-D11	LENS(L), FRT COMB.-----	3-L4		
HOUSING(L), LAMP-RR FENDER	3-E8	INSULATOR, SPARE TIRE-----	4-E10		1-M10	LENS(L), RR. COMB.-----	3-F5		
HOUSING(R), F. COMB.-----	3-L4		4-I10	KNOB, CLOCK-----	2-G10	LENS(R), COURTESY LAMP-----	3-H15		
HOUSING(R), FOG LAMP-----	3-M4	INSULATOR, TANK-FUEL-----	3-F9	KNOB, DUMMY-CLUSTER SWITCH	3-D10		3-L4		
HOUSING(R), LAMP-LID HINGE	3-I4	INSULATOR, THROTTLE BODY---	1-G6	KNOB, HAZARD-CLUSTER SW.---	4-K5	LENS(R), FRT COMB.-----	3-L4		
HOUSING(R), LAMP-RR FENDER	3-C8	INSULATOR, TOP CEILING-----	1-K6	KNOB, LIGHT-CLUSTER SWITCH	4-K5	LENS(R), RR. COMB.-----	3-E5		
HOUSING, AIR CLEANER-----	1-F5		4-I4	KNOB, LIGHT-CLUSTER SWITCH	4-J5	LENS, A/T INDICATOR-METER---	3-H10		
	1-H5			KNOB, PANEL LIGHT-CLUSTER---	4-K5	LENS, COLUMN COVER-----	3-D10		
HOUSING, CLUTCH-----	1-D9			KNOB, REAR DEFFOG-CLUSTER---	4-J5	LENS, COURTESY-----	3-J5		
HOUSING, CONVERTER-----	1-C12			KNOB, SMALL-CLUSTER SW.---	4-J5	LENS, FRONT-----	3-I10		
HOUSING, EXTENSION-----	1-F9			KNOB, SURROUND-REMOTE CONT	4-H6	LENS, INDICATOR-METER-----	3-I10		
	1-H9			KNOB, SWITCH-RR WIPER-----	4-K5	LENS, INTERIOR LAMP-----	3-H10		
HOUSING, FRONT-----	1-I12			KNOB, TONE-TUNER-----	4-T6	LENS, ROOM LAMP-HEAD CONS.---	4-F11		
	1-I3			KNOB, TONE-TUNER & DECK---	4-H6	LENS, SIDE WALL-----	3-K5		
	1-L3			KNOB, TRIPMETER-----	3-I10	LENS, STOP LAMP-HI. MOUNT---	4-N9		
HOUSING, GEAR-----	2-D5	JACK-----	2-M6	KNOB, TURN-CLUSTER SWITCH---	4-I5	LENS, WARNING UNIT-----	3-F5		
	2-G5		2-M6	KNOB, VOL. -REMOTE CONTROL---	4-H6	LEVER-----	3-I10		
HOUSING, INTERMEDIATE-----	1-F3	JOINT-----	3-C14	KNOB, VOLUME-TUNER-----	4-T6	LEVER, CHANGE-----	3-C10		
	1-H3		3-I14	KNOB, WASHER-CLUSTER SW.---	4-J5		1-L11		
HOUSING, REAR-----	1-I3	JOINT SET, BALL-----	2-E5	KNOB, WIPER-CLUSTER SWITCH	4-J5	LEVER SET, THROTTLE BODY---	1-J5		
	1-L3		2-H5	KNOCKLE(L), RECLINING-----	3-D12		1-M5		
HOUSING, ROTOR-FRONT-----	1-E3	JOINT SET, INNER-----	2-D3		3-M12	LEVER(L), OPERATING-----	2-H3		
	1-G3	JOINT SET, OUTER-----	2-D3	KNUCKLE(L), STEERING-----	2-M5	LEVER(R), OPERATING-----	2-H3		
HOUSING, ROTOR-REAR-----	1-E3	JOINT, BACK WINDOW MOULD---	3-L3	KNUCKLE(R), RECLINING-----	3-K11		1-C11		
	1-G3	JOINT, BALL-----	2-E5		3-L12	LEVER, CONTROL-----	1-M10		
HOUSING, WAX-----	1-J5	JOINT, ELBOW-----	4-T8	KNUCKLE(R), STEERING-----	2-M5	LEVER, LIFTER-----	3-C12		
	1-M5	JOINT, ELBOW-W. TANK-----	4-D8			LEVER, OPENER-----	2-G8		
HUB SET, CLUTCH-O.T. & REV	1-I10	JOINT, FLARE-----	2-K9			LEVER, PARKING BRAKE-----	2-M9		
	1-N9								
HUB SET, CLUTCH-1ST & 2ND-	1-F10								
	1-L9								





## ALPHABETICAL INDEX \*\*\* ENGLISH \*\*\*

RING SET, 'O'	1-C3	RING, SNAP	1-L13	RUBBER, MOUNTING	1-H5	SCREW, SEAL RUBBER-INT. CLR	1-L4	SENSOR(R), RR A.B.S.	2-K9
RING(L) MOUNTING	D3		1-N13		2-D5	SCREW, ST. WHEEL BOSS	2-K4	SENSOR, AIR BAG	3-G13
	C5		4-D3		2-G5	SCREW, STOPPER	3-H4	SENSOR, AIR BAG-INNER	3-G13
RING(R) MOUNTING	G4	RING, SNAP-MAGNET CLUTCH	4-G3	RUBBER, MOUNTING-DIFF.	2-J4	SCREW, STRIKER	4-L4	SENSOR, AIR FLOW	1-F5
	G4	RING, SQUARE	1-E3	RUBBER, MOUNTING-IG. COIL	1-F11	SCREW, TAPPING	3-F15		1-H5
RING, 'O'	D7		1-G3	RUBBER, SEAL	1-C9		3-G13	SENSOR, CRANKSHAFT POSI.	4-N4
	D7	RING, SQUARE-OUTER	1-E3		1-G9		3-H15	SENSOR, IN AIR TEMP	4-C5
	E3		1-G3		1-Y9		3-N14	SENSOR, KNOCK	4-D5
	E3	RING, STOPPER	3-C13	RUBBER, SEAL-COWL PANEL	1-F6		4-E9	SENSOR, M.A.P.	4-N4
	E5		3-H12	RUBBER, SEAL-INTER COOLER	1-F4		4-L8	SENSOR, OIL LEVEL	4-N4
	E7	RING, SYNCHRONIZER	1-C10	RUBBER, SEAL-RR LOWER ARM	2-T4		4-M5	SENSOR, OXYGEN	4-C5
	E12		1-G10	RUBBER, SEALING	2-T4	SCREW, TAPPING-DOOR LOCK	3-C14	SENSOR, STEERING PRESSURE	2-K5
	F3		1-J10	RUBBER, SEAT-BRG HOUSING	2-T3		3-T14	SENSOR, TEMP-ENG. COOLANT	1-C5
	F9		1-L9	RUBBER, STAB-FRT	1-J6		4-F4	SENSOR, THROTTLE POSITION	1-K5
	F13	RING, THRUST WASHER	1-C10	RUBBER, STOP	1-E7	SCREW, TAPPING-LOWER UNIT	3-F14	SENSOR, TURN CANCEL	1-N5
	G3		1-J10		1-N6	SCREW, WINDOW REGULATOR	3-F14	SENSOR, WATER LEVEL	4-H5
	G7	RING 'A', SNAP-LOWER UNIT	4-F4	RUBBER, STOPPER	1-C8	SCREW 'A', FIXING BAND	3-F8	SENSOR, WATER LEVEL	4-N4
	G12	RING 'B', SNAP-LOWER UNIT	4-F4		1-E7	SCREW 'A', LOWER UNIT-S/R	2-F8	SEPARATOR, WARNING UNIT	3-C10
	G14	RING 'C', SPROCKET-REG.	3-F14		1-H8	SCREW 'B', FIXING BAND	2-F8	SHADE(L), REAR COMB. LAMP	3-E5
	H3	RIVET	3-C7		1-I7	SCREW 'B', LOWER UNIT-S/R	4-F4	SHADE(R), REAR COMB. LAMP	3-E5
	H7		3-F7		1-I8	SEAL	4-D3	SHADE, LAMP-LICENSE	3-H5
	I3		3-I6	RUBBER, STOPPER-RR DAMPER	1-K8	SEAL KIT	2-M7	SHAFT	1-F14
	I9		3-J4	RUBBER, SUB FRAME	1-F4	SEAL KIT, CALIPER-FRT	2-E6	SHAFT(L), OUTPUT	1-L11
	I12	RIVET, SEAL PLATE-SHROUD	3-L6	RUBBER, T/MISSION MT.	1-J4	SEAL KIT, CALIPER-RR	2-I3	SHAFT, CYLINDER	2-C4
	J4		3-N3		1-C7	SEAL KIT, ST. GEAR	2-E5	SHAFT, DIFF. FINION	4-D3
	J5		3-L6		2-D7		2-H5	SHAFT, DRIVE PINION	2-L3
	K12		3-L6			SEAL KIT, VANE PUMP	2-L5	SHAFT, DRIVE	2-D3
	L3		3-L6			SEAL SET, OIL	1-G4	SHAFT, DRIVE NO. 1	4-F8
	L12	ROD(R), DOOR LOCK-POWER	3-D14			SEAL(L), DUST	5-E9	SHAFT, DRIVE NO. 2	4-F8
	M5		3-J14			SEAL(L), RADIATOR	1-M7	SHAFT, DRIVEN GEAR	1-D7
	N12	ROD, CLUTCH PEDAL	2-H8			SEAL(R), RADIATOR	1-M7		1-H7
	K5	ROD, CONTROL	1-L10			SEAL, 'O' RING	1-E14	SHAFT, ECCENTRIC	1-C4
	D5	ROD, DIAPHRAGM	1-J12				1-I13	SHAFT, ENGY. ABSORBER	2-N4
	E5	ROD, MOTOR	3-J4				1-J12	SHAFT, INPUT	1-D12
	G3	ROD, PARKING	1-G14				1-K12	SHAFT, INTERMED.	2-N4
	N4	ROD, PUSH	2-H8				1-L12	SHAFT, INTERMEDIATE	1-N13
	K6		2-L7				1-F4	SHAFT, MAIN	1-E10
	D8	ROD, SELECTOR	2-G10				1-F4		1-K9
	F4	ROD, SHIFT(1ST&2ND)	1-K10				1-D12	SHAFT, MANUAL	1-G14
	D9		1-N10				1-G12	SHAFT, OIL PUMP	1-C7
	N8	ROD, SHIFT(3RD&4TH)	1-K10				2-E5		1-F7
	K6		1-N10				2-H5	SHAFT, OUTPUT	2-C4
	C3	ROD, SHIFT-OVER TOP & REVE	1-K10				3-F10	SHAFT, PARKING PAWL	1-H14
	C3		1-N10				1-I12	SHAFT, PINION	1-K11
	C3	ROD, TRUNK OPENING	3-G6				1-I13	SHAFT, PROPELLER	2-C3
	N4	ROD 'A'	3-J4				1-C4	SHAFT, PULLEY	1-C8
	F4	ROD 'B'	3-J4				1-C9	SHAFT, REV. IDLE GEAR	1-I10
	K5	ROTOR	1-F7				1-D9		1-N9
	I3		1-G4				1-D12	SHAFT, V.P.V. CONTROL	1-H4
	L3		1-J11				1-F3		1-I4
	L5	ROTOR SET, OIL PUMP	1-E7				1-F9	SHEET,	2-E8
	N4	ROTOR, SENSOR-FRT A.B.S.	2-N5				1-G12	SHEET, BOOT	3-F11
	E5	ROTOR, SENSOR-RR A.B.S.	2-F3				1-H3	SHEET, DAMPER-UPPER	2-F4
	H5	RUBBER(C), CUSHION-BONNET	3-E6				1-H9	SHEET, RUBBER	2-G6
	E3	RUBBER(C), SEAL-BONNET FRT	3-E6				1-I9	SHEET, SPRING	2-G6
	G3	RUBBER(L), SEAL-SIDE PANEL	3-N10				1-J3		2-H8
	K4	RUBBER(R), SEAL-SIDE PANEL	3-N10				1-M3	SHEET, SPRING-REAR DAMPER	2-F4
	G5	RUBBER, BLADE-FRONT	4-F8				2-C4	SHELL, CONNECTING	1-K13
	F10	RUBBER, BLADE-REAR	4-I8				2-J3	SHIELD(L), SPLASH-S. FRAME	3-E9
	I10	RUBBER, CUSHION	3-G6				2-K3	SHIELD(R), SPLASH-S. FRAME	3-E9
	K9		3-J4				2-N3	SHIM, ADJUST	1-E10
	K10		4-K10				2-M5		1-H10
	N10	RUBBER, CUSHION-BONNET FRT	3-E6				2-F3	SHIM, ADJUST-COUNTER SHAFT	1-I10
	E3	RUBBER, CUSHION-BONNET RR	3-E6				1-D14		1-M9
	M8	RUBBER, CUSHION-GARNISH	3-L10				1-H12	SHIM, HINGE-DOOR	3-H13
	G4	RUBBER, DUST SEAL	3-C9				2-G3		3-K13
	H10	RUBBER, ENGINE MT.	2-C7				1-L4	SHIM, LOWER PANEL FRONT	4-F4
	N9		2-D7				3-C6	SHIM, LOWER PANEL REAR	4-G4
	E13	RUBBER, HANGER	2-E7				1-N11	SHUTTING(L), SLIDING ROOF	4-F4
	E14		2-I7				4-G3	SHUTTING(R), SLIDING ROOF	4-E4
	G12	RUBBER, INSULATION	1-C5				3-N4	SILENCER(L), MAIN	2-F7
	J16		1-G6				2-K4		2-G7
	C7		1-J7				1-J5	SILENCER(R), MAIN	2-F7
	D14		1-K6				4-F11		2-J7
	E10		1-L4				3-J11	SILENCER, FLOOR	4-H10
	E14	RUBBER, INSULATOR	3-K16				3-K12		4-L10
	F7		3-M16				3-K12	SILENCER, RELIEF	1-G6
	G14		1-M7				3-M12		1-K6
	H10		2-D10				3-N11	SKIRT(L), FRONT AIR DAM	4-K11
	I13		3-M4				2-E4	SKIRT(R), FRONT AIR DAM	4-K11
	J10	RUBBER, MOUNT.-DIFF. CASING	2-E4				4-M6	SLEEVE, BEARING-FRONT	1-L11
	J13		2-M3				3-M13	SLEEVE, BEARING-REAR	1-L11
	K9	RUBBER, MOUNT-HYD. UNIT	2-J9				3-D10		
	K13	RUBBER, MOUNTING	1-G5						

## ALPHABETICAL INDEX \*\*\* ENGLISH \*\*\*

SLEEVE, CLUTCH HUB-----	1-D10	SPRING-----	4-D6	STAY(L), FENDER-UPPER-----	3-K6	SUPPORTER, CORD-----	1-G11	TRAY, PACKAGE-----	3-C8
	1-F10		4-H5	STAY(L), FRONT BUMPER-----	3-F3		4-N7	TRAY, REAR PACKAGE-----	4-M9
	1-I10		4-I5	STAY(L), RR. BUMPER-----	3-H3	SUPPORTER, FORK-----	1-C9	TRIM(C), FRT BACK-----	3-G12
	1-K9	SPRING SET, THROTTLE BODY-----	1-J5	STAY(R), DAMPER-----	4-K3		1-D9	TRIM(L), 'A' PILLAR-----	4-F9
	1-L9		1-M5	STAY(R), DAMPER-TRUNK LID-----	3-G6	SWITCH-----	1-M11	TRIM(L), 'B' PILLAR-----	4-G9
SLEEVE, GEAR-----	1-M9	SPRING(L), COIL-FRONT-----	2-N16	STAY(R), FENDER-LOWER-----	3-H6		4-N4	TRIM(L), DOOR-----	3-D15
SLEEVE, GUIDE-CONTROL HUB-----	2-K9	SPRING(L), LEVER-----	2-N63		3-J6	SWITCH(L), LOCK-CYLINDER-----	3-F14	TRIM(L), SEAT BACK-----	3-E15
SLEEVE, LOWER ARM-----	2-F3	SPRING(R), COIL-FRONT-----	2-N16	STAY(R), FENDER-UPPER-----	3-H6		3-K14	TRIM(L), FRONT SIDE-----	3-I15
SLEEVE, MAIN-FRT CALIPER-----	2-I3	SPRING(R), LEVER-----	2-N63		3-J6	SWITCH(R), LOCK-CYLINDER-----	3-E14	TRIM(L), QUARTER-----	4-L9
SLEEVE, REGULATOR PLUG-----	1-N12	SPRING, ACCUM N-R-----	1-E13	STAY(R), FRONT BUMPER-----	3-F3	SWITCH, ADJUSTABLE DAMPER-----	4-G5	TRIM(L), SEAT CUSHION-----	3-E12
SLEEVE, SEAL-O.D. CARRIER-----	1-M13	SPRING, ACCUM 1-2-----	1-E13	STAY(R), RR. BUMPER-----	3-H3	SWITCH, CLUSTER-----	4-T5	TRIM(L), TRUNK SIDE-----	4-M9
SLEEVE, SPEEDOMETER-----	1-F9	SPRING, ADJUST-----	3-G4	STAY, BONNET-----	3-E6	SWITCH, CLUTCH-----	2-H8	TRIM(L), TRUNK SIDE-LOWER-----	4-T9
	1-G12	SPRING, APEX SEAL-----	1-F4	STAY, DAMPER-----	4-K3	SWITCH, CLUTCH CUT-----	2-J8	TRIM(L), TRUNK SIDE-UPPER-----	4-J9
	1-I9	SPRING, ASHTRAY-----	3-D10	STAY, LOCK-BONNET-----	3-E6	SWITCH, COMBINATION-----	4-H5	TRIM(L), TRUNK SIDE-UPPER-----	4-E9
SOCKET-----	3-H10	SPRING, BACK UP-----	1-G13	STAY, SET PLATE-FASCIA-----	3-H6	SWITCH, CRUISE-CLUSTER-----	4-H5	TRIM(L), TRUNK SIDE-UPPER-----	4-F9
SOCKET, AIR BLEED-----	1-E5	SPRING, BALANCE SHAFT-----	2-N4		3-J6	SWITCH, DOOR-----	4-K5	TRIM(L), TRUNK SIDE-UPPER-----	4-E9
SOCKET, BULB-----	3-H10	SPRING, BALL PARK-----	1-G14	STEM, PISTON-----	1-H12	SWITCH, FOG LAMP-----	4-G5	TRIM(L), TRUNK SIDE-UPPER-----	4-F9
SOCKET, LICENSE LAMP-----	3-H5	SPRING, BRUSH-----	1-I11	STEM, PISTON BAND-----	1-L12	SWITCH, GLOVE TRAY-----	3-K10	TRIM(L), TRUNK SIDE-UPPER-----	4-F9
SOCKET, RR SIDE TURN LAMP-----	3-H5		1-M11	STIFFENER(L), REAR SPOILER-----	4-K11		4-N9	TRIM(L), TRUNK SIDE-UPPER-----	4-E9
SOCKET, RR, COMB-----	3-E5	SPRING, CENTER PANEL-----	3-C10	STIFFENER(R), REAR SPOILER-----	4-K11		4-N9	TRIM(L), TRUNK SIDE-UPPER-----	4-F9
SOCKET, SIDE TURN-----	3-L4	SPRING, COIL-FRONT-----	2-I6	STOPPER SET-----	1-K11	SWITCH, IGNITION-----	3-D3	TRIM(L), TRUNK SIDE-UPPER-----	4-F9
SOCKET, STOP LAMP-HI, MOUNT-----	3-F5	SPRING, COIL-REAR-----	2-G4	STOPPER(L), GLOVE LID-----	3-M10	SWITCH, INHIBITOR-----	4-D5	TRIM(L), TRUNK SIDE-UPPER-----	4-F9
SOLENOID, LOCK UP CONTROL-----	4-E5	SPRING, CORNER SEAL-----	1-F4	STOPPER(R), GLOVE LID-----	3-M10	SWITCH, LEVEL-WASHER TANK-----	4-D8	TRIM(L), TRUNK SIDE-UPPER-----	4-F9
SPACER-----	1-C8	SPRING, CUSHION-PSTN. STEM-----	1-H12	STOPPER, CALIPER-RR-----	2-H3	SWITCH, LIGHT-CLUSTER SW.-----	4-J5	TRIM(L), TRUNK SIDE-UPPER-----	4-F9
	1-D4	SPRING, DAMPER-----	1-J5	STOPPER, CONSOLE LID-----	3-E11	SWITCH, LIMIT-TOP MOTOR-----	4-J4	TRIM(L), TRUNK SIDE-UPPER-----	3-D15
	1-E6		1-M5	STOPPER, FILLER LID-----	2-G8	SWITCH, LOCK CYLINDER-----	4-K3	TRIM(L), TRUNK SIDE-UPPER-----	3-I15
	1-F5	SPRING, FRT. - INNER-----	1-F4	STOPPER, GLASS-----	3-M13	SWITCH, LOWER PRESSURE-----	4-E5	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-H5	SPRING, FRT. - OUTER-----	1-G4	STOPPER, LOWER ARM-----	2-F3	SWITCH, OVER DRIVE CONTROL-----	2-G10	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-H10	SPRING, GLOVE LID-----	3-M10	STOPPER, REAR DAMPER-----	2-F4	SWITCH, PARK & NEUTRAL-----	4-N4	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-I9	SPRING, INTERIOR MIRROR-----	4-F11	STOPPER, WHEEL-----	4-M10	SWITCH, PARKING LAMP-----	2-N9	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-K10	SPRING, LIFT-----	2-G8	STRAINER, INNER-----	1-F13	SWITCH, POWER WINDOW-----	4-L5	TRIM(L), TRUNK SIDE-UPPER-----	3-M12
	1-M9	SPRING, MODIFIER-----	1-C13	STRAINER, OIL-----	1-C7	SWITCH, RMT MIRROR-----	4-G5	TRIM(L), TRUNK SIDE-UPPER-----	3-M11
	1-N9	SPRING, N/D ACCUM-----	1-E13		1-D13	SWITCH, SFT TOP-----	4-G5	TRIM(L), TRUNK SIDE-UPPER-----	3-M12
	2-C4	SPRING, O.W. VALVE-----	2-L7	STRAP, AIR PUMP-----	1-G7	SWITCH, STOP-----	2-J8	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-D4	SPRING, OUTER-APEX SEAL-----	1-F4	STRAP, ALTERNATOR-----	1-D6		2-L8	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-D10	SPRING, PARKING REVER-----	2-M9	STRAP, A', CARGO ROOM-----	1-H11	SWITCH, THERMO-----	2-E7	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-E7	SPRING, PAWL RETURN-----	1-H14	STRAP'A', L/C/PMT-----	4-D11		2-E7	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-H8	SPRING, PELLET-----	1-J7	STRAP'A', L/CPMT-----	4-F11	SWITCH, TURN-CLUSTER SW.-----	4-H5	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-I7	SPRING, PISTON-----	1-E14	STRAP'B', CARGO ROOM-----	4-D11		4-H5	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-I8	SPRING, PISTON RETURN-----	1-H12	STRAP'B', L/CPMT-----	4-F11	SWITCH, WIPER-CLUSTER SW.-----	4-J5	TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-K8		1-I13	STRIKER-----	3-F14			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-L3	SPRING, PRESSURE-----	1-C7		3-K14			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-M3		1-F7	STRAP, AIR PUMP-----	3-M10			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-M9	SPRING, REAR-INNER-----	1-G4	STRAP, ALTERNATOR-----	1-H11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	3-L11	SPRING, REAR-OUTER-----	1-G4	STRAP'A', CARGO ROOM-----	4-D11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	3-L12	SPRING, REDUCING-----	1-E13	STRAP'A', L/CPMT-----	4-F11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	4-C4	SPRING, REGULATOR-----	1-N12	STRAP'B', CARGO ROOM-----	4-D11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	4-N3	SPRING, RETURN-----	2-C8	STRAP'B', L/CPMT-----	4-F11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPACER, AIR CLEANER-----	1-C12		2-H6	STRIKER(L), LOCK-TOP-----	4-K4			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPACER, BONNET STAY-----	3-E6	SPRING, RETURN-BRAKE-----	2-M9	STRIKER(R), LOCK-TOP-----	4-K4			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPACER, DOWEL-----	1-H14		2-I8	STRIKER, LID-----	3-G6			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPACER, REAR DAMPER-----	2-F4	SPRING, RETURN-SHAFT-----	2-K8	STRIKER, LOCK-----	4-K3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPACER, WINDOW-----	4-N3	SPRING, SELECT-----	2-N4	STRIKER, STORAGE BOX-----	4-N9			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPACER'A'-----	4-C4		2-K8	STRUT, BAND-----	1-H12			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	4-N3	SPRING, SELECT-----	2-N4	STUD-----	1-I3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPACER'C'-----	4-C4	SPRING, SHIFT ROD-REVERSE-----	1-L10		1-K4			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	4-N3	SPRING, SIDE SEAL-----	1-N10	STUD, CLUTCH HOUSING-----	1-L3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	4-M6	SPRING, SYNCHRO. KEY-----	1-F10	STUD, COVER-----	1-M4			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPEAKER(L), LOUD-FRONT-----	4-M6		1-L9		2-E7			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPEAKER(L), REAR-----	4-M6	SPRING, SYNCHRO. KEY-----	1-F10	STUD, DIFF. CARRIER-----	2-I7			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPEAKER(L), W/BOX & AMP-----	3-K12		1-L9	STUD, FRONT COVER-----	1-J3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPEAKER(R), LOUD-FRT-----	4-L6	SPRING, SYNCHRONIZER-----	1-G10		1-M3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	4-M6		1-L9	STUD, HEX-HYD. UNIT-----	2-J9			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPEAKER(R), LOUD-RR-----	4-M6	SPRING, THERMO PELLET-E/S-----	1-C4	STUD, HOUSING-----	1-I3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPEAKER, DOOR-----	4-M6	SPRING, THROTTLE BACK-UP-----	1-C13		1-L3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPEAKER, LOUD-REAR-----	4-M6	SPRING, THROTTLE RELIEF-----	1-F13	STUD, ROTOR HOUSING-----	1-E3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPEEDOMETER-----	3-I10	SPRING, YOKE-----	2-D5		1-G3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPINDLE, ADJUST LOCK-----	2-H3		2-G5	SUN VISOR(L)-----	4-C11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPINDLE, SELECT LOCK-----	1-C11	SPRING, 1-2 SHIFT-----	1-N12	SUN VISOR(R)-----	4-F11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-L10	SPRING, 1/2 REDUCING-----	1-E13		4-E11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPOILER(L), SIDE-----	4-K11	SPRING, 2-3 SHIFT-----	1-N12	SUPPORT(L), MOUNTING-----	2-D6			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPOILER(R), SIDE-----	4-K11	SPRING, 3-2 TIMING-----	1-G13	SUPPORT(R), MOUNTING-----	2-D6			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPOILER, REAR-----	4-L11	SPRING, 3-4 SHIFT-----	1-G13	SUPPORT, CENTER-----	1-N13			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
SPRING-----	1-C4	SPRING, V', REAR BRAKE-----	2-G3	SUPPORT, DRUM-----	4-H10			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-C11	SPROCKET, REGULATOR GUIDE-----	3-F14	SUPPORT, FOOT-----	4-L10			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-D11	STABILIZER, FRONT-----	2-J6	SUPPORT, MOUNTING-----	2-G3			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-D12	STABILIZER, RR-----	2-H4	SUPPORTER-----	1-G11			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-D13	STARTER-----	1-K11	SUPPORTER, ACTUATOR-----	1-G14			TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-K3	STATOR-----	1-I11					TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-L10	STAY(L), DAMPER-----	4-L3					TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-M10	STAY(L), DAMPER-TRUNK LID-----	3-G6					TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	1-N3	STAY(L), FENDER-LOWER-----	3-I6					TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	2-L7	STAY(L), FENDER-UPPER-----	3-I6					TRIM(L), TRUNK SIDE-UPPER-----	4-L9
	3-D11		3-I6					TRIM(L), TRUNK SIDE-UPPER-----	4-L9

## ALPHABETICAL INDEX \*\*\* ENGLISH \*\*\*

UNIT,CENTRAL CONTROL-----	4-M5		WASHER, THRUST-----	1-G10	YOKE, SUPPORT-----	2-D5
UNIT, COOLING-----	4-I3	*****		1-J10		2-G5
	4-J3	* W *		1-M9		
UNIT, DIAGNOSIS-AIR BAG----	4-M5	*****	WASHER, THRUST LOCK-OVER T	1-C10		
UNIT, DOOR LOCK & TIMER----	4-N5			1-J10		
UNIT, DRIVE-----	4-E4		WASHER, THRUST-REVERSE IDL	1-I10		
UNIT, HEAD LAMP-----	3-G4			1-N9		
UNIT, HEAT GAUGE-----	4-C5	WALL (L), SIDE-----	3-D11	WASHER, TOOTHED-----	4-G8	
UNIT, OPENER-GLASS HATCH----	4-K3	WALL (R), SIDE-----	3-D11	WASHER, WAVE-CHANGE CONT. C	1-C11	
UNIT, WARNING-----	3-D10	WASHER-----	1-D13		1-L10	
			1-G14	WAX, THERMO-----	1-K5	
			1-M13		1-M5	
*****			3-C7	WEATHERSTRIP(L)-----	3-L13	
* V *			2-D7	WEATHERSTRIP(L), CAB. SIDE	3-M13	
*****			2-F4	WEATHERSTRIP(L), DOOR-----	3-I13	
			2-F7		3-M13	
			2-G7	WEATHERSTRIP(L), INN.-----	3-H15	
VACUUM POWER ASSIST-----	2-C9		2-H7		3-N14	
	2-M8		2-J3	WEATHERSTRIP(L), OUT.-----	3-H15	
VALVE-----	4-F3		2-J7		3-M14	
VALVE (L), SHUTTER-----	3-N7		2-K3	WEATHERSTRIP(L), RAIN RAIL	3-J13	
VALVE (R), SHUTTER-----	3-M7		2-K7	WEATHERSTRIP(R)-----	3-L13	
	3-N7		2-N3	WEATHERSTRIP(R), CAB. SIDE	3-M13	
VALVE, AIR-----	2-K6		2-N5	WEATHERSTRIP(R), DOOR-----	3-I13	
VALVE, AIR BYPASS-----	1-I5		2-C15		3-L13	
VALVE, AIR CONTROL-----	1-D6		2-F15	WEATHERSTRIP(R), INN.-----	3-H15	
VALVE, CHECK-----	1-D6		2-G15		3-N14	
	1-H5		2-K15	WEATHERSTRIP(R), OUT.-----	3-H15	
	1-H6		2-L12		3-N14	
	1-K5		2-N16	WEATHERSTRIP(R), RAIN RAIL	3-J13	
	1-M6		4-E3	WEATHERSTRIP, GLASS HATCH	4-L3	
	1-N5		4-G8	WEATHERSTRIP, LID-----	3-G6	
	2-F8		4-I8	WEATHERSTRIP, RR. WIND-----	4-C4	
	3-J3		4-J8	WEATHERSTRIP, S/ROOF-----	4-F4	
VALVE, CONTROL-----	1-N12	WASHER SET-----	1-L11	WEIGHT, BALANCE-----	1-E4	
VALVE, CONTROL BACK UP-----	1-G13	WASHER (L), STOP-LOWER ARM	3-N3	WEIGHT, COUNTER-----	1-E4	
VALVE, DELAY-----	1-K5	WASHER (R), STOP-LOWER ARM	3-N3	WEIGHT, DISC WHEEL-ALUMI--	2-K6	
VALVE, DUAL PROPORTIONING----	2-E9	WASHER, BALANCE WEIGHT-----	3-C3		2-L6	
	2-G9	WASHER, BONNET BULGE-----	3-D6	WELT (L), SEAMING-----	3-J13	
VALVE, DUTY SOLENOID-----	1-M6	WASHER, CLAW-----	3-M5		3-N13	
VALVE, EXPANSION-----	4-I3	WASHER, CONTACT SPRING-----	4-H5	WELT (L), SEAMING-GLS HATCH	4-M3	
	4-J3	WASHER, COVER-SPARE TIRE----	4-I10	WELT (R), SEAMING-----	3-J13	
VALVE, FUEL VAPOR.-----	2-F8	WASHER, DISHED-----	1-G13		3-N13	
VALVE, IDLE AIR CONTROL-----	1-I6	WASHER, FRONT CLUTCH-----	1-L12	WELT (R), SEAMING-GLS HATCH	4-L3	
	1-M6	WASHER, HINGE-----	1-L15	WELT, SEAMING-----	4-D4	
VALVE, MANUAL-----	1-N12		1-M11	WELT, SEAMING-GLS HATCH LW	4-L3	
VALVE, MODIFIER-----	1-C13	WASHER, HOOK-HOOD COVER-----	3-L12	WELT, SEAMING-GLS HATCH UP	4-L3	
VALVE, NON RETURN-----	2-E8	WASHER, HOOK 'A' & 'B'-----	4-L4	WELT, SEAMING-JACK-----	2-M6	
VALVE, ONE WAY-----	1-G13	WASHER, HORN CAP-----	2-K4	WELT, SEAMING-ROOF-----	4-N8	
VALVE, ORIFICE CHECK-----	1-C13	WASHER, HYD. UNIT-----	2-J9	WHEEL SET, DISC-ALUMI-----	2-M6	
VALVE, PURGE-----	1-I6	WASHER, LOCK-----	2-I7	WHEEL, DISC-ALUMI-----	2-M6	
VALVE, REDUCING-----	1-M6	WASHER, LOCK-PUMP FILTER-----	2-D8	WHEEL, DISC-STEEL-----	2-K6	
VALVE, REGULATOR-----	1-D13	WASHER, LOWER UNIT-S/ROOF-----	4-G4	WHEEL, FLY-----	1-C4	
VALVE, RELIEF-----	4-G3	WASHER, MOUNT RUBBER-DIFF.-----	2-J4	WHEEL, SPROCKET-----	1-C7	
VALVE, SHIFT 3-4-----	1-G13	WASHER, PLAIN-----	1-H12		1-F7	
VALVE, SHUTTER-MANIFOLD-----	1-I4		1-I12	WIRE, A.C.C.-----	4-D6	
VALVE, SOL.-AIR BLEED EXTE	1-H6	WASHER, PLAIN-DUST COVER----	2-N5	WIRE, EARTH-FILLER PIPE----	2-E8	
	1-K6	WASHER, PLAIN-LOWER ARM-----	2-N5	WIRE, EARTH-HYD. UNIT-----	2-K9	
VALVE, SOL.-AIR BLEED SURG	1-L6		2-N5	WIRE, RELEASE-----	3-L11	
VALVE, SOLENOID-----	1-E6		2-G16		3-L12	
VALVE, SOLENOID NO1-----	1-F13		2-N5	WIRE, RELEASE-BONNET-----	3-E6	
VALVE, ST. GEAR-----	2-E5		2-C7	WIRE, REMOCON. MIRROR-----	4-E11	
	2-I5		2-D7		4-N10	
VALVE, THERMO-----	1-K5		2-E3	WIRING, ANTILOCK BRAKE SYS	2-L9	
	1-N5		2-M5	WIRING, ENGINE-----	4-H7	
VALVE, THROTTLE-----	1-C13	WASHER, PLAIN-REAR BRAKE----	2-E3		4-J7	
VALVE, THROTTLE BACK-UP-----	1-C13	WASHER, ROOF MOULD-----	3-G3	WIRING, STORAGE-----	4-E7	
VALVE, THROTTLE RELIEF-----	1-F13	WASHER, RUBBER-----	3-D6	WRENCH, HUB NUT-----	4-M10	
VALVE, VACUUM DELAY-----	1-I5		3-M10	WRENCH, WHEEL CAP-----	4-M10	
VALVE, VARIABLE PORT-----	1-H4	WASHER, SEAL-----	1-J3	WTHSTP., HOMING BAR-FRONT-	4-J4	
VALVE, WATER-----	3-E16		1-M3	WTHSTP (L), ROOF PANEL-----	4-L4	
VALVE, 1-2 REDUCING-----	1-D13	WASHER, SETTING-----	3-H13	WTHSTP (R), ROOF PANEL-----	4-L4	
VALVE, 1-2 SHIFT-----	1-N12		3-K13	WTHSTP, FRONT HEADER-----	4-J4	
VALVE, 2-3 SHIFT-----	1-N12	WASHER, SLEEVE-REAR BRAKE----	2-E3			
VALVE, 3-4 SHIFT-COAST-----	1-G13	WASHER, SPARE TIRE COVER-----	4-I10	*****		
VALVE, 3WAY-----	1-G6	WASHER, SPRING-----	4-E3	* Y *		
	1-K6		4-F3	*****		
VESSEL (L), CHANNEL-----	3-J15	WASHER, SPRING-LOWER ARM----	2-F3			
VESSEL (R), CHANNEL-----	3-J15	WASHER, STOP-----	2-J4	YOKE-----	1-K11	
		WASHER, THRUST-----	1-C10	YOKE, DIFFERENTIAL-----	2-L3	
			1-E4			




## MODEL IDENTIFICATION

Coupe



Convertible

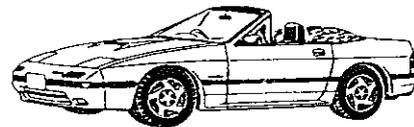

## BODY PAINTS AND INTERIOR COLORS

THIS LIST SHOWS COMBINATION OF BODY PAINT AND INTERIOR COLOR USING THIS LIST YOU WILL BE ABLE TO FIND OUT NECESSARY COLOR CODE OF PART YOU NEED IN THE TEXT.

BODY PAINT		INTERIOR COLOR CODE			
NAME	CODE				
Brilliant black	PZ	FD8		FD8	
Blaze red	SQ	FD8		FD8	
Crystal white	UC	FD8	FD9	FD8	FD9
Brave blue mica	5N	FD8	FD9		FD9
Applied model		Coupe		Convertible	

NOTE:1)  
COLORS OF INTERIOR CODES  
ARE AS FOLLOWS.

FD8	Black
FD9	Blue

NOTE:2)  
THE FOLLOWING INTERIOR  
COLOR CODES ARE NOT SHOWN  
IN THIS LIST THOUGH THESE ARE  
IN THE TEXT.

BECAUSE THESE ARE NOT USED  
ON THE PRODUCTION LINE AT  
PRESENT (UP TO Dec. 1993)

FE0	Red
FE1	Black/Tan

# COMPLETE ASSEMBLY PARTS NUMBERS

## Engine

Specifications of vehicles				Parts number
Turbo	T/mission	Body	Model year	
W/O turbo	Manual T/mission	Coupe	※	N350 - 02 - 000
		Convertible	1991	N387 - 02 - 000
			1992	N3B1 - 02 - 000
	Automatic T/mission	Coupe	※	N351 - 02 - 000
		Convertible	1991	N388 - 02 - 000
			1992	N3B2 - 02 - 000
Turbo	※	※	※	N370 - 02 - 000

## T/mission

Specifications of vehicles			Parts number
T/mission	Turbo	Body	
Manual T/mission	W/O turbo	Coupe	M50P - 03 - 000
		Convertible	M50X - 03 - 000
	Turbo	※	R553 - 03 - 000
Automatic T/mission	※	※	BV09 - 19 - 090C

The ※ mark in the above chart does not affect on part number selection.  
Complete assemblies are available and manufactured in accordance with current production specifications only.


## Cabin

(1:1)

Specifications of vehicles					Parts number		
Body	Roof	T/mission	Suspension	Turbo			
Coupe	W/O sun roof	Manual T/mission	※	※	FC21 - 07 - 000		
		Automatic T/mission			FC07 - 07 - 000		
	Sun roof	Manual T/mission	W/O auto adjusting suspension	W/O turbo	FC23 - 07 - 000		
					Turbo	FC18 - 07 - 000	
			Auto adjusting suspension	※	FC22 - 07 - 000		
					FC08 - 07 - 000		
		Automatic T/mission	W/O auto adjusting suspension	※	FC09 - 07 - 000		
					Auto adjusting suspension	FC66 - 07 - 000	
			Convertible	※	Manual T/mission	※	FC67 - 07 - 000
							Automatic T/mission

## VEHICLE IDENTIFICATION SYSTEM FOR RX-7 SERIES (1991,1992)

VIN (= Vehicle Identification Number) for RX-7series. (1991,1992 Year Model) consists of WMI(= World Manufacturer Identifier), VDS(= Vehicle Description Section) and VIS(= Vehicle Identification Section). VDS consisting of six alphanumeric characters denotes the "MODEL SERIES". VIS consisting of eight alphanumeric characters denotes the serial unit number of vehicle and is sequentially numbered within each VDS.

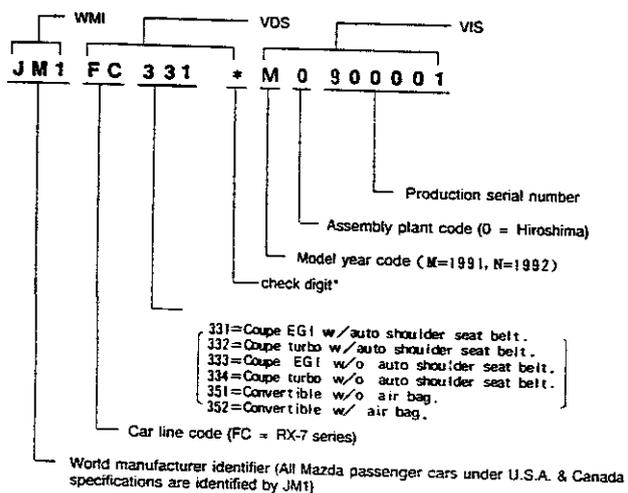


\* Check digit is included as a VIN security feature to permit law enforcement verification of the authenticity of a suspected illegal VIN plate. This single digit number is determined, based upon a complex mathematical formula which is applied to each vehicle's VIN number.

\*\* Miscellaneous Identification Code identifies major components such as engine, brake system, cab type, etc.

AUFA03 · 07

### LOCATION OF VIN PLATE

The plate is attached to the top ledge of the dash panel under the bonnet (engine hood), refer to the illustration shown right.

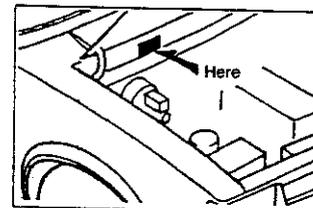

#### [NOTE]

If the VIN (chassis) reference number in the PCM (Parts catalog microfiche) appeared as:

FC3\*\*\*-900001

..... the vehicle's VIN would be e.g. JM1FC331\*M0900001.

#### [NOTE]

If the VIN (chassis) reference number in the PCM (Parts catalog microfiche) appeared as:

FC35\*-100001

..... the vehicle's VIN would be e.g. JM1FC352\*N0100001.

# ABBREVIATIONS

The following abbreviations are used throughout Mazda Microfiche parts catalog: in the illustration, text, section number index, alphabetical index.

Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition
1ST	First	B.S.V.	Bleed Solenoid Valve	DIFF.	Differential	H	Head	LEM	Less Emission Controls	P	Panel
2ND	Second	BTHR	Breather	DISC/B	Disc Brake	HARN.	Harness	L.H.D	Left Hand Drive	(P)	Primary
2D.	2-Door	BUMP	Bumper	DIST	Distributor	H.A.C.	High Altitude Compensator	L.H. SIDE	Left Hand Side	PARK or PARKG	Parking
2-SEAT	2-Seater	BURG.	Burglar	DMPR	Dumper	H.A.COMPENSATOR	High Altitude Compensator	LKOUT	Lockout	PASS.	Passenger
3D.	3-Door	BY A.C.V	Bypass Air Control Valve	DOHC	Double Overhead Camshaft	HB	Hatchback	L.NOSE	Long Nose	P.B.	Positive Brake
3RD	Third					H.B. RE	Hatchback Release	L.NVGT CPU	Less Navigation computer	P.C.V	Positive Crankcase Ventilation
3-SP	3-Speed	[C]	Center	D.P.	Dual Proportioning	HC-A/T	Hydro Control Automatic T/Mission	LO	Low	PHLPPNS	Philippines
4D.	4-Door	C. or (C)	Center	DRUM/B	Drum Brake	HIGHT	High-Tension	L.S. VALVE	Load Sensing Valve	PILR	Pillar
4-SP or 4-SPD	4-Speed	CALIF.	California	D/TIRE or D.TIRE	Double Tire (+Dual Tire)	H.L or H.L or H.LAMP	Head Lamp	L/PARTITION	Less Partition	PIV	Pivot
4.5-SP	4-Speed/5-Speed	C/AREA	Cold Area	D.T. TOP	Detachable Top	H.KONG	Hong Kong	L.F.G.	L.P. Gas (+Liquefied Petroleum Gas)	PKG.	Package
4TH	Fourth	CAN.	Canada	DUMP	Dump Truck	H.M.	High	L.S.D. or L.S. DIFF	Less Slip Differential (Lites) Tank	PNEUMA.	Pneumatic
5D.	5-Door	CARB.	Carburetor	DX.	Deluxe	H.M.	High	L.T.	Less Tailgate	PNL	Panel
5-LINK	5-Link Suspension	CAT.	Catalyst	D.YLW	Dark Yellow	H.M.	High Altitude	L.VR	Lever	PNT	Point
5-SP or 5-SPD	5-Speed	C.DISC	Compact Disc	[E]	Economic Commission for Europe	H.M.	High Altitude	LWR	Lower	POSIT.	Positive
10TH-ANNIV.	10th-Anniversary	CE	Conventional Engine (+Reciprocating Gasoline Engine)	ECON.	Economy	H.M.	High Altitude	LRG.	Large	POW. WINDOW	Power Window
[A]				E.C.P.S. SYS	Electric Control Power Steering System	H.M.	High Altitude	LX-P	LX with Performance Package	P.P	Polypropylene (Plastics)
.A	.Ampere	C.G.R.	Constant Gear Ratio	EGI	Electric Gasoline Injection	H.M.	High Altitude	[M]	(Meter(s))	PRESS	Pressure
A.A.S. or A.A.SUSP	Automatic Adjusting Suspension	CH	Coach	E.G.R.	Exhaust Gas Recirculation	H.M.	High Altitude	[M]	(Meter(s))	PROTN	Protection
ABS.	Absorber	CHG	Change	ELECT.	Electric	NSG	Nose	.M	(Meter(s))	PROTR.	Protector
A.B.S.	Anti lock Brake System	CHMBR	Chamber	EM.	Emission Controls	HT, HT or H/TOP	Hardtop	MA. CYL.	Master Cylinder	PORTGL	Portugal
A.B.S.V.	Air Bleed Solenoid Valve	CHK	Check	ENEGY or ENGY	Energy	[I]	Inner Diameter	MAINT.	Maintain or Maintenance	P.S.	Power Steering
A.C.	Air Conditioner	CLG.	Cooling	ENG.	Engine	IG or IGM.	Ignition	MAP	Manifold Absolute Pressure	P.SOUND	Premium Sound
A.C.C.	Automatic Cruise Controls	CLNR	Cleaner	ENGLZR	Equalizer	ILLUML	Illumination	MAN.	Manifold Absolute Pressure	PSTM	Positive Temperature Suspension
ACCEL.	Accelerator	CLTR	Cigarette Lighter	EQUIP.	Equipment	IN.	Inlet	MLD. or MLDG.	Moulding	P.T.O.	Power Take Off
ACCEL.	Accelerator	CLU	Clutch	EX.	Exhaust	IND.	Indicator	MM	(Millimeters)	PU	Pickup
ACTR	Actuator	.CM	.Centimeter (s)	EXC.	Excerpt	INHIB.	Inhibitor	M.M	(Millimeters)	P/W or P. WINDOW	Power Window
A.C.V.	Air Control Valve	C.MEMBER	Crossmember	EXC. 10TH-ANNIV.	EXC. 10th-Anniversary	INJ.	Injection	MPX.	Multiplex	PWRGT LIFTR	Power Gate Lifter
ADJ.	Adjuster or Adjustable or Adjusting	C.NMTR	Control	EXT.	Extension	INS.	Insulation	MRN	Maroon	PWT	Power Window
ADJ.SUSP	Adjustable Suspension	COMB.	Combination	EXTRACT.	Extractor	INSP.	Inspection	MT. & MTG.	Mounting	QTY	Quantity
AIR P.	Air Pipe	COMP.	Companion	[F]	Front-	INST.	Instrument	MT	Manual Transmission	R	Right
AIR CON.	Air Conditioner	COMPR.	Compressor	F.	Foot	INT.	Interior	[N]	Number of Teeth	RAD.	Radiator
ALTN	Alternator	COMPS.	Compressor	.F	.feet (.foot)	INT.COOLER	Inter Cooler	N.	Normal	RE	Rotary Engine
ALUM.	Aluminum	CONDSR	Condenser	FED.	Federal	INTER	Intermediate	NARR.	Narrow	RECIPRO	Reciprocating Engine (+Conventional Engine)
AMP	Amplifier	CONN.	Connector or Connecting	FINIS	Finisher	INTMT. or INTERMIT.	Intermittent	N.C.	Normal Close	REFRIGER.	Refrigerator Van
ANALOG	Analogue	CONS.	Console	F.I.P.	Fuel Injection Pump	I.R.S. or I.R. SUSP	Independent Rear Suspension	N.O.	Normal Open	REG. or REGU.	Regular
ANNIV.	10th Anniversary	CONT.	Control	FLX.	Flex	L.S.C.	Idle Speed Control	NO.	Number	REG. GAS	Regular Gasoline
ANT	Antenna	CONV.	Conventional	F.L.DECK	Fuel Logic Deck	NRY	Ivory	NON-SP.	Non-Special Equipment	NON-TILT	Non-Tilting
ARG	Argent	CONVR	Converter	FOLD.	Folding	[K]	(Kilogram(s))	NOR.	Normal	NOR.	Normal
A.S. ABSORBER	Adjust Shock Absorber	COVR.	Cover	FRA	France	.KG	(Kilogram(s))	NOZ.	Nozzle	N.S.W.	New South Wales (Aust.)
ASH.	Ashtray	CPE	Coupe	FRT	Front	.KM	(Kilometer(s))	N.S.W.	New South Wales (Aust.)	NAVGT. CPU	Navigation Computer
ASSY	Assembly	CPT.	Complete Assembly	F/SHIFT	Floor Shift	.KW	(Kilowatt(s))	N.Z.	New Zealand	N.Z.	New Zealand
AT	Automatic Transmission	CPU	Computer	FULL CON.	Fully Controlled	[L]	Left	[O]	Over	[O]	Over
ATT	Attachment	C.P.UNIT	Central Processing Unit	[G]	(Gram(s))	L or (L)	Length	[O]	Outer Diameter	OD	Outer Diameter
AUS	Austria	CRK	Crank	.G	(Gram(s))	.L	(Liter(s))	OF	Oil Filter	O.H.	Over Head
AUST	Australia	CRUSTR	Cluster	GARN	Garnish	.L	(Liter(s))	O.FLTR	Oil Filter	O.H.	Over Head
AUTO.	Automatic	C/S/SHIFT	Column Shift	GAS.	Gasoline	.LT.	(Liter(s) Tank	O.H.	Over Head	O.H.	Over Head
[B]		CTR.	Center	GASOH	Gasohol	L.	Less. (+Without...)	O.H.	Over Head	O.H.	Over Head
BAL.	Balance	CUSH.	Cushion	GEN	General	L.A.A. SUSP	Less Automatic Adjusting Suspension	OHC	Overhead Camshaft	OIL CONSUMP	Oil Consumption
BAT	Battery	CYL.	Cylinder	G.L.S	Glass	L.A.C.	Less Air Conditioner	OIL CONSUMP	Oil Consumption	OP	Optional
B.COLOR	Body Color	D. or DR	Door	G.L.S	Glass	L.BODY	Long Body	OP	Optional	ORD. BY.	Order By
B/DOOR	Back Door	D.	Dark	G.L.S	Glass	L/BOX	Luggage Compartment	ORD. BY.	Order By	O.S.	Oversize
BDY	Body	DBL CAB	Double Cab (+Crew Cab)	G.L.S	Glass	L.C.DISPLAY	Liquid Crystal Display	O.S.	Oversize	O.T.	Over Top
BELT.	Beltline	D. BLUE	Dark Blue	G.L.S	Glass	L/EGI	Less Electric Gasoline Injection	OUT	Outer	[P]	Panel
BLK	Black	D. BRN	Dark Brown	G.L.S	Glass						
BLU	Blue	DE	Diesel Engine	G.L.S	Glass						
BLU/GRY	Bluish Gray	DEF.	Defroster	G.L.S	Glass						
BLU. M	Blue Metallic	DEFG	Defogger	G.L.S	Glass						
BLVA	Bolivia	DES	Design	G.L.S	Glass						
BRG.	Bearing	DEMIST.	Demister	G.L.S	Glass						
BRKT	Bracket	D. GRY	Dark Gray	G.L.S	Glass						
BRN	Brown	D/APH	Diaphragm	G.L.S	Glass						
BRT.	Bright (+Great Britain)			G.L.S	Glass						

Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition
SON	Solen	U. LONG	Ultra Long		
S/DUTY	Standard Duty	UMD	Under		
SELECT	Selective Use	UP	Upper		
SEN	Sensor	URETANE	Urethane Rubber		
SERV	Service	U.S.	Undersize		
R FORK	Shift Fork	[V]			
SG, SQN or SIG	Signal	V	Vol(s)		
SHFT	Shift	V.	Valve		
SHRD	Shroud	VAC	Vacuum		
SHTR	Shutter	V.CHAMBER	Vacuum Chamber		
SILV. M or SILVER M.	Silver Metallic	Vent.	Ventilator or Ventilation		
SING	Singapore	V.G.R.	Variable Gear Ratio		
SLEN	Silencer	VNL	Vinyl		
SLOG	Slogging	[W]			
SLM	Saloon	W	Watt(s)		
SML	Small	W. or WIND	Window		
S. NOSE	Short Nose	W-	With-		
SOL	Solenoid	W/	With, or Use with		
SP	Speed	W/O L.S. VALVE	W/O Loss Sensing Valve		
SPEC.	Specification	W/O OIL CONSUMP	W/O Oil Consumption		
SPEEDO.	Speedometer	W/O P.T.O.	W/O Power Take-Off		
SPG.	Spring	WARM	Warming		
SPK.	Speaker (- Loud-speaker)	WAS.	Washer		
SPLR	Spoiler	W/AUTO BELT	With Automatic Shoulder Belt		
ST.	Steering	W/CHASSIS	Windshield Chassis		
STAB.	Stabilizer	WAT	Water		
STD	Standard	WGN	Wagon		
S/TIRE or S. TIRE	Single Tire	WHL	Wheel		
STYL	Styled	WHT	White		
?UB-TRNS	Sub-transmission	WIND.	Window		
SUN SHLD	Sun Shield	WIP	Wiper		
SURGT	Surge Tank	W/O AUTO BELT	Without Automatic Shoulder Belt		
SUP. GAS	Super Gasoline	W/O	Without		
SUSP	Suspension	WOOF	Wooler		
S.V	Solenoid Valve	W. PUMP	Water Pump		
SW.	Switch	WSHLD. - WINDSHLD	Windshield		
S. WASHER	Screen Washer (Windshield Washer)	WSTR or WTHSTP	Washerstop		
SWD.	Sweden	W/T	With Tube (Tire)		
SYNC.	Synchronizer	[Y]			
[Y]		YLX	Yellow		
T	Tons(s)	YLW GRN	Yellowish Green		
T.	Thickness	YLW/WHT	Yellowish White		
TACH. & TACHOM	Tachometer	[Z]			
T ADJUST	Time Adjusting	Z TEMP	Zone Tempored		
TACHOZ TACHOM.	Tachometer				
T.BELT	Timing Belt				
T.CEILING	Top Ceiling				
TEMP.	Temperature				
T/F	Transfer				
TH.	Throttle				
THAI	Thailand				
THERM.	Thermostat				
THROT	Throttle				
TL	Tubless				
TRMISSION	Transmission				
TRD CLMT	Tropical Climates				
TRK	Truck				
TRQ. GLIDE	Torque Glide				
T. TOSAGO	Trinidad and Tobago				
TURB.	Turbocharge				
TWN	Twin				
[U]					
U.K.	The United Kingdom				